



User Manual

RSPS 150-10

Stock number: 2521599

EN



rspro.com



Table of Contents

| | |
|---|------------|
| SAFETY INSTRUCTIONS | 5 |
| GETTING STARTED | 9 |
| Overview | 10 |
| Appearance | 14 |
| Theory of Operation | 21 |
| OPERATION | 31 |
| Set Up..... | 33 |
| Basic Operation | 46 |
| Parallel / Series Operation | 62 |
| Test Scripts | 79 |
| CONFIGURATION | 87 |
| Configuration Overview | 88 |
| ANALOG CONTROL | 106 |
| Analog Remote Control Overview | 107 |
| Remote Monitoring..... | 125 |
| Isolated Analog Control Option | 132 |
| COMMUNICATION INTERFACE | 147 |
| Interface Configuration..... | 148 |
| FAQ | 177 |
| APPENDIX | 178 |
| RSPS 150-10 Factory Default Settings..... | 179 |
| Error Messages & Messages | 182 |
| LED ASCII Table Character Set | 183 |
| Specifications | 184 |
| Dimensions | 188 |

| | |
|---------------------------------|------------|
| Certificate Of Compliance | 189 |
| INDEX | 190 |

SAFETY

INSTRUCTIONS

This chapter contains important safety instructions that you must follow during operation and storage. Read the following before any operation to insure your safety and to keep the instrument in the best possible condition.

Safety Symbols

These safety symbols may appear in this manual or on the instrument.



WARNING

Warning: Identifies conditions or practices that could result in injury or loss of life.



CAUTION

Caution: Identifies conditions or practices that could result in damage to the RSPS 150-10 or to other properties.



DANGER High Voltage



Attention Refer to the Manual



Protective Conductor Terminal



Earth (ground) Terminal





Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

Safety Guidelines

General Guideline



CAUTION

- Do not place any heavy object on the RSPS 150-10.
- Avoid severe impact or rough handling that leads to damaging the RSPS 150-10.
- Do not discharge static electricity to the RSPS 150-10.
- Use only mating connectors, not bare wires, for the terminals.
- Do not block the cooling fan opening.
- Do not disassemble the RSPS 150-10 unless you are qualified.

(Measurement categories) EN61010-1:2010 and EN61010-2-030 specifies the measurement categories and their requirements as follows. The RSPS 150-10 falls under category II.

- Measurement category IV is for measurement performed at the source of low-voltage installation.
- Measurement category III is for measurement performed in the building installation.
- Measurement category II is for measurement performed on the circuits directly connected to the low voltage installation.
- 0 is for measurements performed on circuits not directly connected to Mains.

Power Supply



WARNING

- AC Input voltage range: 85Vac~265Vac
- Frequency: 47Hz to 63Hz
- To avoid electrical shock connect the protective grounding conductor of the AC power cord to an earth ground.

**Cleaning the
RSPS 150-10**

- Disconnect the power cord before cleaning.
 - Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid.
 - Do not use chemicals containing harsh material such as benzene, toluene, xylene, and acetone.
-

**Operation
Environment**

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Relative Humidity: 20%~ 85% (no condensation)
- Altitude: < 2000m
- Temperature: 0°C to 50°C

(Pollution Degree) EN61010-1:2010 and EN61010-2-030 specifies the pollution degrees and their requirements as follows. The RSPS 150-10 falls under degree 2.

Pollution refers to "addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity".

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
 - Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
 - Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.
-

**Storage
environment**

- Location: Indoor
 - Temperature: -25°C to 70°C
 - Relative Humidity: ≤90%(no condensation)
-

Disposal

Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.

Power cord for the United Kingdom

When using the power supply in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons




WARNING: THIS APPLIANCE MUST BE EARTHED

IMPORTANT: The wires in this lead are coloured in accordance with the following code:

| | |
|----------------|--------------|
| Green/ Yellow: | Earth |
| Blue: | Neutral |
| Brown: | Live (Phase) |



As the colours of the wires in main leads may not correspond with the coloured marking identified in your plug/appliance, proceed as follows:

The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with either the letter E, the earth symbol  or coloured Green/Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.

If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, a cable of 0.75mm^2 should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.

Any exposed wiring from a cable, plug or connection that is engaged in a live socket is extremely hazardous. If a cable or plug is deemed hazardous, turn off the mains power and remove the cable, any fuses and fuse assemblies. All hazardous wiring must be immediately destroyed and replaced in accordance to the above standard.

GETTING STARTED

This chapter describes the power supply in a nutshell, including its main features and front / rear panel introduction. After going through the overview, please read the theory of operation to become familiar with the operating modes, protection modes and other safety considerations.

| | |
|-----------------------------------|----|
| Overview | 10 |
| Main Features | 10 |
| Accessories | 11 |
| Appearance | 14 |
| Front Panel..... | 14 |
| Display and Operation Panel | 17 |
| Rear Panel | 19 |
| Theory of Operation | 21 |
| Operating Area Description..... | 21 |
| CC and CV Mode | 22 |
| Slew Rate | 24 |
| Bleeder Control | 24 |
| Internal Resistance | 25 |
| Alarms | 25 |
| Considerations | 27 |
| Grounding | 29 |

Overview

| Model name | Voltage Rating ¹ | Current Rating ² | Power |
|-----------------------|-----------------------------|-----------------------------|-------|
| RSPS 150-10 150-10 | 150V | 10A | 1500W |

¹Minimum voltage guaranteed to 0.2% of rating voltage.

²Minimum current guaranteed to 0.4% of rating current.

Main Features

- | | |
|-------------|--|
| Performance | <ul style="list-style-type: none">• High power density: 1500W in 1U• Universal input voltage 85~265Vac, continuous operation.• Output voltage up to 150V, current up to 10A. |
|-------------|--|

- | | |
|----------|--|
| Features | <ul style="list-style-type: none">• Active power factor correction.• Parallel master/slave operation with active current sharing.• Remote sensing to compensate for voltage drop in load leads.• 19" rack mounted ATE applications.• A built-in Web server.• OVP, OCP and OHP protection.• Preset memory function.• Adjustable voltage and current slew rates.• Bleeder circuit ON/OFF setting.• CV, CC priority start function. (Prevents overshoot with output ON)• Supports test scripts. |
|----------|--|

- Interface
- Built-in RS-232/485, LAN and USB interface.
 - Analog output programming and monitoring.
 - Optional interfaces: GPIB, Isolated Voltage (0-5V/0-10V) and Isolated Current (4-20mA) programming and monitoring interface. (Factory options)

Accessories

Before using the RSPS 150-10 power supply unit, check the package contents to make sure all the standard accessories are included.

| Standard Accessories | Part number | Description | Qty. |
|----------------------|-----------------------|---|-------|
| | | Output terminal cover | 1 |
| | | Analog connector plug kit | 1 |
| | | Output terminal M8 bolt set (6V~60V model) | 1 |
| | | Input terminal cover | 1 |
| | | Power Cord (230VAC/10A, 1.8M, provide for some region only) | 1 |
| | 82GW1SAFE0M*1 | Safety Guide | 1 |
| | 62SB-8K0HD1*1 | 1U Handle, ROHS | 2 |
| | 62SB-8K0HP1*1 | 1U BRACKET (LEFT), RoHS | 1 |
| | 62SB-8K0HP2*1 | 1U BRACKET (RIGHT), RoHS | 1 |
| | CD-ROM | User manual | 1 set |
| | 82SU-RSPS 150-1000K*1 | Packing list | |


| Factory Installed Options | Part number | Description |
|---------------------------|-------------|---|
| | PSU-GPIB | GPIB interface |
| | PSU -ISO-V | Voltage programming isolated analog interface |
| | PSU -ISO-I | Current programming isolated analog interface |
| | PSU -001 | Front Panel Filter Kit (Operation Temperature is guaranteed to 40°C) |
| Optional Accessories | Part number | Description |
| | PSU -01C | Cable for 2 units of RSPS 150-10 in parallel mode connection |
| | PSU -01B | Bus Bar for 2 units of RSPS 150-10 in parallel mode connection |
| | PSU -01A | Joins a vertical stack of 2 RSPS 150-10 units together. 2U-sized handles x2, joining plates x2. |
| | PSU -02C | Cable for 3 units of RSPS 150-10 in parallel mode connection |
| | PSU -02B | Bus Bar for 3 units of RSPS 150-10 in parallel mode connection |
| | PSU -02A | Joins a vertical stack of 3 RSPS 150-10 units together. 3U-sized handles x2, joining plates x2. |
| | PSU -03C | Cable for 4 units of RSPS 150-10 in parallel mode connection |
| | PSU -03B | Bus Bar for 4 units of RSPS 150-10 in parallel mode connection |
| | PSU -03A | Joins a vertical stack of 4 RSPS 150-10 units together. 4U-sized handles x2, joining plates x2. |

| | |
|----------|---|
| PSU -232 | RS232 cable with DB9 connector kit. It Includes RS232 cable with DB9 connector, RS485 used master cable (gray plug), slave cable (black plug) and end plug terminal. |
| PSU -485 | RS485 cable with DB9 connector kit. It Includes RS485 cable with DB9 connector, RS485 used master cable (gray plug), slave cable (black plug) and end plug terminal. |
| GRM-001 | Rack-mount slides (General Devices P/N: C-300-S-116-RH-LH) |
| GTL-246 | USB Cable 2.0-A-B Type, Approx. 1.2M |
| GPW-001 | Power Cord SJT 12AWG/3C, 3m MAX Length, 105 °C, RNB5-5*3P UL/CSA type |
| GPW-002 | Power Cord H05W-F 1.5mm ² /3C, 3m MAX Length, 105 °C, RNB5-5*3P VDE type |
| GPW-003 | Power Cord VCTF 3.5mm ² /3C, 3m MAX Length, 105 °C, RNB5-5*3P PSE type |


| Download | Name | Description |
|----------|---------------------|--------------------------------------|
| | RSPS 150-10_cdc.inf | RSPS 150-10 USB driver |
| Other | Name | Description |
| | | Certificate of traceable calibration |

Appearance

Front Panel

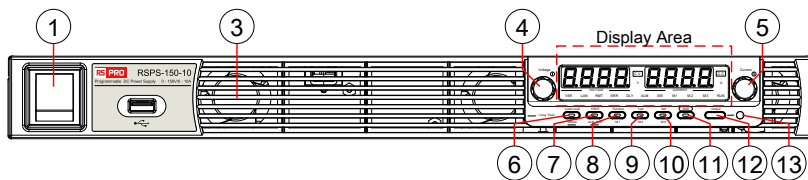

1. Power Switch

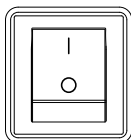

Used to turn the power on/off.

2. USB A Port

 


USB A port for data transfer, loading test scripts etc.

3. Air Inlet

Air inlet for cooling the inside of the RSPS 150-10.

 
4. Voltage Knob




 
 
 
 
Used to set the voltage value or select a parameter number in the Function settings.


 
Display Area The display area shows setting values, output values and parameter settings. The function LEDs below show the current status and mode of the power supply. See page 17 for details.

5. Current Knob




Used to set the current value or change the value of a Function parameter.

- | | | |
|----------------------|---|--|
| 6. Lock/Local Button |  | Used to lock all front panel buttons other than the Output Button or it switches to local mode. |
| Unlock Button | | (Long push) Used to unlock the front panel buttons. |
| 7. PROT Button |  | Used to set and display OVP, OCP and UVL. |
| ALM_CLR Button | | (Long push) Used to release protection functions that have been activated. |
| 8. Function Button |  | Used to configure the various functions. |
| M1 Button | | (+Shift) Used to recall the M1 setup. (+Shift and hold) Used to save the current setup to M1. |
| 9. Test Button |  | Used to run customized scripts for testing. |
| M2 Button | | (+Shift) Used to recall the M2 setup. (+Shift and hold) Used to save the current setup to M2. |
| 10. Set Button |  | Used to set and confirm the output voltage and output current. |
| M3 Button | | (+Shift) Used to recall the M3 setup. (+Shift and hold) Used to save the current setup to M3. |

- | | | |
|-------------------|---|---|
| 11. Shift Button |  | Used to enable the functions that are written in blue characters below certain buttons. |
| 12. Output Button |  | Used to turn the output on or off. |
| 13. Output ON LED | | Lights in green when the output is on. |

Display and Operation Panel

Display Area

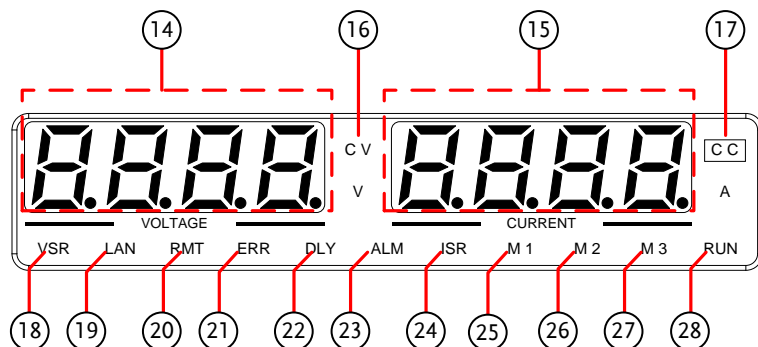

- | | |
|-------------------|---|
| 14. Voltage Meter | Displays the voltage or the parameter number of a Function parameter. |
| 15. Current Meter | Displays the current or the value of a Function parameter. |
| 16. CV LED | Lights in green during constant voltage mode. |
| 17. CC LED | Lights in green during constant current mode. |
| 18. VSR LED | Lights up when CV Slew Rate Priority is enabled. |
| 19. LAN LED | Lights up when the LAN interface is connected. |
| 20. RMT LED | Lights in green during remote control. |
| 21. ERR LED | Lights in red when an error has occurred. |
| 22. DLY LED | The Output On/Off Delay indicator LED. |
| 23. ALM LED | Lights in red when a protection function has been activated. |


- 24. ISR LED Lights up when CC Slew Rate Priority is enabled.
- 25. M1 LED Lights in green when the memory value are being recalled or saved.
- 26. M2 LED Lights in green when the memory value are being recalled or saved.
- 27. M3 LED Lights in green when the memory value are being recalled or saved.
- 28. RUN LED Lights up when a Test Script has been activated.




Note

Only the ERR and ALM LED's are red. All the others are green.

Rear Panel

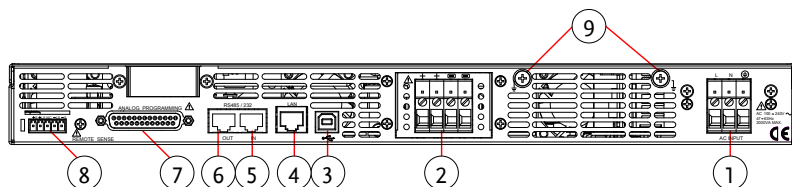


1. AC Input

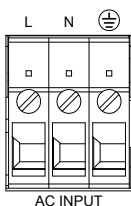


Wire clamp connector.

2. DC Output

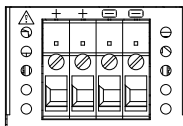


Output terminals for 80V to 600V models.

 3. USB




USB port for controlling the RSPS 150-10 remotely.

 4. LAN



Ethernet port for controlling the RSPS 150-10 remotely.

 5. Remote-IN




Two different types of cables can be used for RS232 or RS485-based remote control.

PSU-232: RS232 cable with DB9 connector kit.

PSU-485: RS485 cable with DB9 connector kit.

 6. Remote-OUT



RJ-45 connector that is used to daisy chain power supplies with the Remote-IN port to form a communication bus.

 
PSU-485S: Serial link cable with RJ-45 shielded connector.

7. Analog Control



External analog control connector.


8. Remote Sense



Compensation of load wire drop.

9. Ground Screw

Connectors for grounding the output (two positions, shown in red).

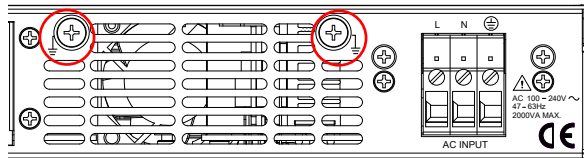

Theory of Operation

The theory of operation chapter describes the basic principles of operation, protection modes and important considerations that must be taken into account before use.


Operating Area Description

Background The RSPS 150-10 power supplies are regulated DC power supplies with a high voltage and current output. These operate in CC or CV mode within a wide operating range limited only by the voltage or current output.

The operating area of each power supply is determined by the rated output power as well as the voltage and current rating.

Below is a comparison of the operating areas of each power supply.

RSPS 150-10 Operating Area

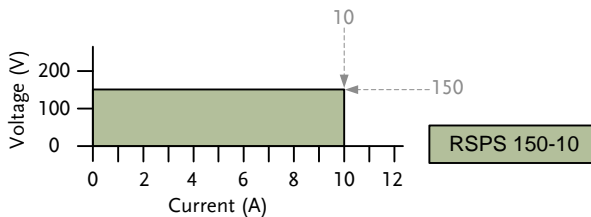

CC and CV Mode


CC and CV mode Description

When the power supply is operating in constant current mode (CC) a constant current will be supplied to the load. When in constant current mode the voltage output can vary, whilst the current remains constant. When the load resistance increases to the point where the set current limit (I_{SET}) can no longer be sustained the power supply switches to CV mode. The point where the power supply switches modes is the crossover point.

When the power supply is operating in CV mode, a constant voltage will be supplied to the load, whilst the current will vary as the load varies. At the point that the load resistance is too low to maintain a constant voltage, the power supply will switch to CC mode and maintain the set current limit.

The conditions that determine whether the power supply operates in CC or CV mode depends on the set current (I_{SET}), the set voltage (V_{SET}), the load resistance (R_L) and the critical resistance (R_C). The critical resistance is determined by V_{SET}/I_{SET} . The power supply will operate in CV mode when the load resistance is greater than the critical resistance. This means that the voltage output will be equal to the V_{SET} voltage but the current will be less than I_{SET} . If the load resistance is reduced to the point that the current output reaches the I_{SET} level, the power supply switches to CC mode.

Conversely the power supply will operate in CC mode when the load resistance is less than the critical resistance. In CC mode the current output is equal to I_{SET} and the voltage output is less than V_{SET} .

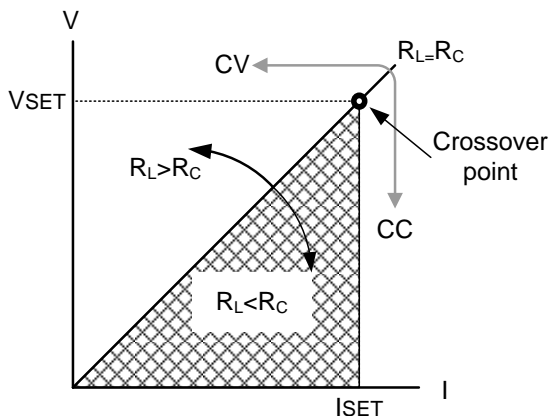

Note


For loads that generate a transient surge voltage, V_{SET} must be set so that the surge voltage does not reach the voltage limit.

For loads in which transient peak current flows, I_{SET} must be set so that the peak value does not reach the current limit.

Slew Rate

Theory


The RSPS 150-10 has selectable slew rates for CC and CV mode. This gives the RSPS 150-10 power supply the ability to limit the current/voltage draw of the power supply. Slew rate settings are divided into High Speed Priority and Slew Rate Priority. High speed priority mode will use the fastest slew rate for the instrument. Slew Rate Priority mode allows for user adjustable slew rates for CC or CV mode. The rising and falling slew rate can be set independently.

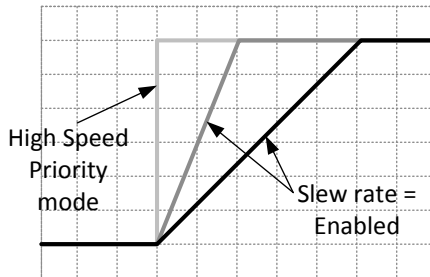

Bleeder Control

Background

 The RSPS 150-10 DC power supplies employ a bleed resistor in parallel with the output terminals.



Bleed resistors are designed to dissipate the power from the power supply filter capacitors when power is turned off and the load is disconnected. Without a bleed resistor, power may remain charged on the filter capacitors for some time and be potentially hazardous.

In addition, bleed resistors also allow for smoother voltage regulation of the power supply as the bleed resistor acts as a minimum voltage load.

The bleed resistance can be turned on or off using the configuration settings.



Note

By default the bleed resistance is on. For battery charging applications, be sure to turn the bleed resistance off as the bleed resistor can discharge the connected battery when the unit is off.

Internal Resistance

Background

On the RSPS 150-10, the internal resistance of the power supply can be user-defined in software. (Internal Resistance Setting, see the Normal Function Settings on page 93.) When the internal resistance is set it can be seen as a resistance in series with the positive output terminal. This allows the power supply to simulate power sources that have internal resistances such as lead acid batteries.

By default the internal resistance is 0Ω.

Internal Resistance Range

| Unit Model | Internal Resistance Range |
|--------------------|---------------------------|
| RSPS 150-10 150-10 | 0.00 ~ 15.00Ω |

Alarms

The RSPS 150-10 power supplies have a number of protection features. When one of the protection alarms is tripped, the ALM icon on the display will be lit and the type of alarm that has been tripped will be shown on the display. When an alarm has been tripped the output will be automatically turned off. For details on how to clear an alarm or to set the protection modes, please see page 46.

| | |
|----------|---|
| OVP | Over voltage protection (OVP) prevents a high voltage from damaging the load. This alarm can be set by the user. |
| OCP | Over current protection prevents high current from damaging the load. This alarm can be set by the user. |
| UVL | Under voltage limit. This function sets a minimum voltage setting level for the output. It can be set by the user. |
| OHP | Over temperature protection for slave and master board. OHP is a hardware protection function. Only when the unit has cooled can the over temperature protection alarms be cleared. |
| OH1 | Master board over temperature protection. |
| OH2 | Slave board over temperature protection. |
| ALM SENS | Sense alarm. This alarm will detect if the sense wires have been connected to the wrong polarity. |
| HW OVP | Hardware over voltage protection. This is a hardware OVP that is fixed at approximately 120% of the rated voltage output. |
| AC | AC Fail. This alarm function is activated when a low AC input is detected. |
| FAN FAIL | Fan failure. This alarm function is activated when the fan RPMs drop to an abnormally low level. |
| Shutdown | Force Shutdown is not activated as a result of the RSPS 150-10 detecting an error. It is a function that is used to turn the output off through the application of a signal from the rear-panel analog control connector when an abnormal condition occurs. |


Alarm output Alarms are output via the analog control connector. The alarm output is an isolated open-collector photo coupler output.

Considerations


The following situations should be taken into consideration when using the power supply.

Inrush current When the power supply switch is first turned on, an inrush current is generated. Ensure there is enough power available for the power supply when first turned on, especially if a number of units are turned on at the same time.

Pulsed or Peaked loads When the load has current peaks or is pulsed, it is possible for the maximum current to exceed the mean current value. The RSPS 150-10 power supply ammeter only indicates mean current values, which mean for pulsed current loads, the actual current can exceed the indicated value. For pulsed loads, the current limit must be increased, or a power supply with a greater capacity must be chosen. As shown below, a pulsed load may exceed the current limit and the indicated current on the power supply ammeter.

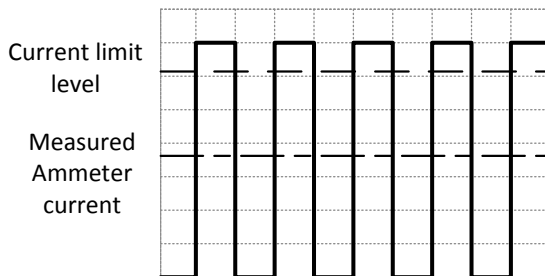

Reverse Current: When the power supply is connected to a regenerative load such as a transformer or inverter, reverse current will feed back to the power supply. The RSPS 150-10 power supply cannot absorb reverse current. For loads that create reverse current, connect a resistor in parallel to the power supply to bypass the reverse current. This description only applies when the bleed resistance is off.

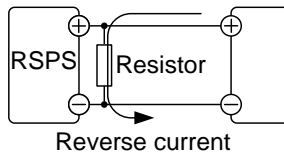


Note

The current output will decrease by the amount of current absorbed by the resistor.

Ensure the resistor used can withstand the power capacity of the power supply/load.

Reverse Current: When the power supply is connected to a load such as a battery, reverse current may flow back to the power supply. To prevent damage to the power supply, use a reverse-current-protection diode in series between the power supply and load.

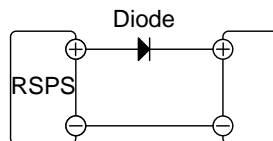


CAUTION

Ensure the reverse withstand voltage of the diode is able to withstand 2 times the rated output voltage of the power supply and the forward current capacity can withstand 3 to 10 times the rated output current of the power supply.

Ensure the diode is able to withstand the heat generated in the following scenarios.


When the diode is used to limit reverse voltage, remote sensing cannot be used.

Grounding

The output terminals of the RSPS 150-10 power supplies are isolated with respect to the protective grounding terminal. The insulation capacity of the load, the load cables and other connected devices must be taken into consideration when connected to the protective ground or when floating.


Floating

As the output terminals are floating, the load and all load cables must have an insulation capacity that is greater than the isolation voltage of the power supply.

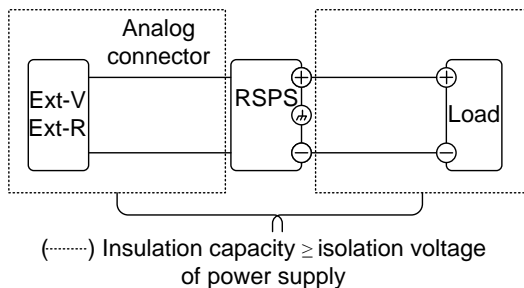
WARNING

If the insulation capacity of the load and load cables are not greater than the isolation voltage of the power supply, electric shock may occur.


Grounded output terminal If the positive or negative terminal is connected to the protective ground terminal, the insulation capacity needed for the load and load cables is greatly reduced. The insulation capacity only needs to be greater than the maximum output voltage of the power supply with respect to ground.

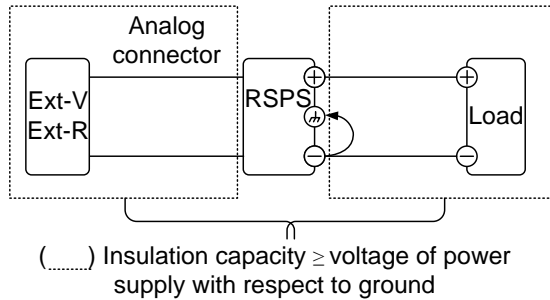

CAUTION

If using external voltage control, do not ground the external voltage terminal as this will create a short circuit.

Example of grounded output terminals

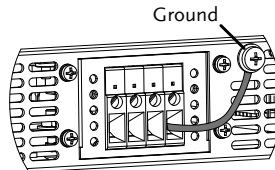

O

PERATION

| | |
|--|----|
| Set Up..... | 33 |
| Line Voltage Connection | 33 |
| Power Up | 35 |
| Wire Gauge Considerations | 36 |
| Output Terminals..... | 37 |
| Using the Output Terminal Cover | 39 |
| Using the Rack Mount Kit | 40 |
| How to Use the Instrument | 40 |
| Reset to Factory Default Settings | 42 |
| View System Version and Build Date | 43 |
| Basic Operation | 46 |
| Setting OVP/OCP/UVL Levels | 46 |
| Set to C.V. Priority Mode | 49 |
| Set to C.C. Priority Mode | 52 |
| Panel Lock | 54 |
| Save Setup..... | 55 |
| Recall Setup | 55 |
| Voltage Sense..... | 56 |
| Remote Sense Connector | 56 |
| Remote Sense Cover | 57 |
| Local Sense | 58 |
| Remote Sense | 58 |
| Parallel / Series Operation | 62 |
| Master-Slave Parallel Overview | 63 |
| Master-Slave Parallel Connection..... | 65 |
| Master-Slave Parallel Operation | 69 |
| Master-Slave Parallel Calibration..... | 71 |
| Master-Slave Series Overview..... | 73 |
| Series Connection..... | 75 |
| Series Operation | 76 |
| Test Scripts | 79 |
| Test Script File Format..... | 80 |
| Test Script Settings | 80 |
| Setting the Test Script Settings..... | 81 |



| | |
|---------------------------------|----|
| Load Test Script from USB | 82 |
| Run Test Script..... | 83 |
| Export Test Script to USB | 84 |
| Remove Test Script..... | 85 |

Set Up

Line Voltage Connection

Background The RSPS 150-10 power supplies use a universal power input that can be used with 100 and 240 Vac systems. To connect or replace the power cord (user supplied, specification below), use the procedure below:



Warning

The following procedure should only be attempted by competent persons.

Ensure the AC power cord is not connected to power. Always allow the power supply to fully discharge before disconnecting the AC power cord.

Recommended Power Cord Specifications 25A 250V, 3x12 AWG, outer diameter: 9-11mm, rated 60 °C min., 3m maximum length and approved by the national safety standards for the country of use.



Note


There are two type power cord protective sheaths in the standard accessories. One is black color and it is used for outer diameter: 8~13.5mm power cord.

The other is gray color and it is used for outer diameter: 5.5~11.2mm power cord.

The RSPS 150-10 has a number of power cord options available. Please see the optional accessories on page 11 for details.


Removal 1. Turn off the power switch and unplug the power from the socket.

2. Unscrew the power cord protective sheath.
3. Remove the 2 screws holding the power cord cover and remove.
4. Remove the AC power cord wires with a flat head screwdriver.

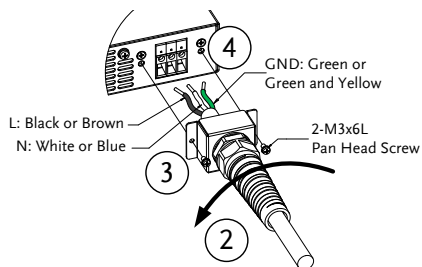


Installation


1. Connect the AC power cord wires to the AC input terminals.

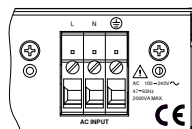

- Black/Brown → Line (L)
- White/Blue → Neutral (N)
- Green /Green & Yellow → Ground (⏏)

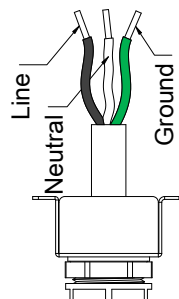

2. Make sure the sheath is tightened to the lock nut.
3. Re-install the power cord cover.

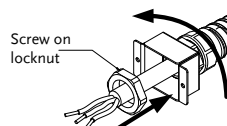


Power Up

Steps


1. Connect the power cord to the universal power input.

Page 33

 2. Press the POWER switch on.



 3. The power supply will show the Power On settings (Pon) at start up. If no Power On settings are configured, the RSPS 150-10 will recover the state right before the power was last turned OFF. If used for the first time, the default settings will appear on the display.
For default configuration settings, see page 179.



Note

You may also configure how the RSPS 150-10 will behave on startup by altering the Power On Configuration settings, see page 100.

Power Down

To turn the RSPS 150-10 power supply off, press the power switch again (0 position). It may take a few seconds for the power supply to fully turn off.



CAUTION

The power supply takes around 8 seconds to fully turn on or shutdown.

Do not turn the power on and off quickly. Please wait for the display to fully turn off.

Wire Gauge Considerations

Background Before connecting the output terminals to a load, the wire gauge of the cables should be considered.

It is essential that the current capacity of the load cables is adequate. The rating of the cables must equal or exceed the maximum current rated output of the instrument.

| Recommended wire gauge | Wire Gauge | Nominal Cross Section | Maximum Current |
|------------------------|------------|-----------------------|-----------------|
| | 20 | 0.5 | 9 |
| | 18 | 0.75 | 11 |
| | 18 | 1 | 13 |
| | 16 | 1.5 | 18 |
| | 14 | 2.5 | 24 |
| | 12 | 4 | 34 |
| | 10 | 6 | 45 |
| | 8 | 10 | 64 |
| | 6 | 16 | 88 |
| | 4 | 25 | 120 |
| | 2 | 32 | 145 |
| | 1 | 50 | 190 |
| | 00 | 70 | 240 |
| | 000 | 95 | 290 |
| | 0000 | 120 | 340 |

The maximum operation current depends on the maximum allowable temperature of the insulation on the cable.

Under this condition, above table figures the maximum current that insulation's temperature rise should be under 60 degree and ambient temperature must be less than 30 degrees.

To minimize noise pickup or radiation, the load wires and remote sense wires should be twisted-pairs of the shortest possible length. Shielding of the sense leads may be necessary in high noise

environments. Where shielding is used, connect the shield to the chassis via the rear panel ground screw. Even if noise is not a concern, the load and remote sense wires should be twisted-pairs to reduce coupling, which might impact the stability of the power supply. The sense leads should be separated from the power leads.

Output Terminals

Background Before connecting the output terminals to the load, first consider whether voltage sense will be used, the gauge of the cable wiring and the withstand voltage of the cables and load.

The output is the following type:

- Clamp block terminals



WARNING

Dangerous voltages. Ensure that the power to the instrument is disabled before handling the power supply output terminals. Failing to do so may lead to electric shock.

Steps

1. Turn the power switch off.




2. Remove the output terminal cover. [Page 39](#)
3. If necessary, connect the chassis ground terminal to either the positive or negative terminal. See the grounding chapter for details. [Page 29](#)
4. Choose a suitable wire gauge and crimping terminal for the load cables. [Page 36](#)
5. Connect the positive load cable to the positive output terminal and the negative cable to the negative output terminal.

6. Reattach the output terminal cover. Page 39

Connection
Example


Simply secure the stripped connectors inside each terminal.

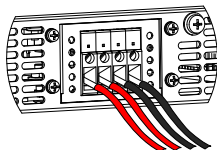

Using the Output Terminal Cover

Steps

1. Partially unscrew the 2 screws beside the terminals.
2. Line-up the notches in the cover with the 2 screws.
3. Tighten the screws to secure the cover over the terminals.

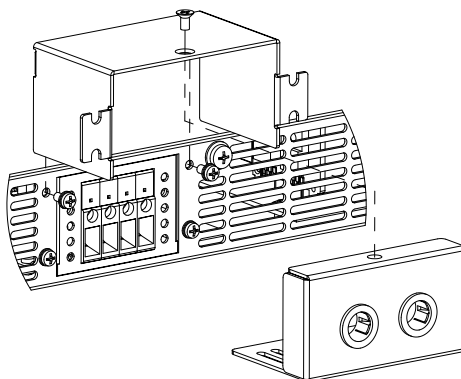


Removal

Reverse the procedure to remove the terminal covers.

Using the Rack Mount Kit

- Background** The RSPS 150-10 are designed to be directly mounted into 19 inch 1U rack mounts.
- The RSPS 150-10 can be installed using the sliding mounts (Part number: GRM-001). See the GRM-001 manual for installation instructions.
- Rack mount diagram: Sliding mounts** The following diagram shows the approximate dimensions of the GRM-001 sliding mounts. These sliding mounts should only be used within racks with a depth of 500mm.

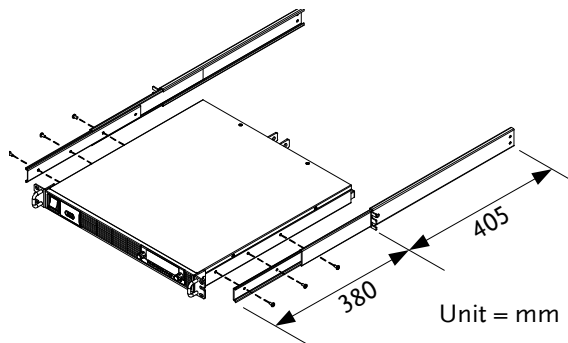


How to Use the Instrument



- Background** The RSPS 150-10 power supplies use a novel method of configuring parameter values only using the voltage or current knobs. The knobs are used to quickly edit parameter values at 0.01, 0.1 or 1 unit steps at a time.
- When the user manual says to set a value or parameter, use the steps below.

Example Use the Voltage knob to set a voltage of 10.05 volts.

 
1. Repeatedly press the Voltage knob until the least significant digit is highlighted. This will allow the voltage to be edited in 0.01 volt steps.



  2. Turn the Voltage knob till 0.05 volts is shown on the voltage display.



 3. Repeatedly press the Voltage knob until the most significant digit is highlighted. This will allow the voltage to be edited in 1 volt steps.
4. Turn the Voltage knob until 10.05 is shown.



Note

Notice the Set key becomes illuminated when setting the current or voltage.

If the voltage or current knobs are unresponsive, press the Set key first.

Reset to Factory Default Settings

 
Background The F-88 configuration setting allows the RSPS 150-10 to be reset back to the factory default settings. See page 179 for the default factory settings.

Steps


1. Press the Function key. The Function key will light up.




2. The display should show F-01 on the top and the configuration setting for F-01 on the bottom.




 
3. Rotate the Voltage knob to change the F setting to F-88 (Factory Set Value).



 4. Use the Current knob to set the F-88 setting to 1 (Return to factory default settings).



  5. Press the Voltage knob to confirm. Conf will be displayed when it is configuring.



6. Press the Function key again to exit. The Function key light will turn off.



View System Version and Build Date

Background The F-89 configuration setting allows you to view the RSPS 150-10 version number, build date, keyboard version, analog-control version, kernel build, test command version and test command build date.

 
Steps

1. Press the Function key. The Function key will light up.


Function




2. The display should show F-01 on the top and the configuration setting for F-01 on the bottom.



 3. Rotate the Voltage knob to change the F setting to F-89 (Show Version).



 4. Rotate the Current knob to view the version and build date for the various items.



F-89

- 0-XX: Version (1/2)
- 1-XX: Version (2/2)
- 2-XX: Build On-Year. (1/2)
- 3-XX: Build On-Year. (2/2)
- 4-XX: Build On-Month.
- 5-XX: Build On-Day.
- 6-XX: Keyboard CPLD. (1/2)
- 7-XX: Keyboard CPLD. (2/2)
- 8-XX: Analog Board CPLD. (1/2)
- 9-XX: Analog Board CPLD. (2/2)
- A-XX: Analog Board FPGA (1/2)
- B-XX: Analog Board FPGA. (1/2)
- C-XX: Kernel Build On-Year. (1/2)
- D-XX: Kernel Build On-Year. (2/2)

E -XX: Kernel Build On-Month.
 F-XX: Kernel Build On-Day.
 G-XX: Test Command Version. (1/2)
 H-XX: Test Command Version. (2/2)
 I-XX: Test Command Build On-Year. (1/2)
 J-XX: Test Command Build On-Year. (2/2)
 K-XX: Test Command Build On-Month.
 L-XX: Test Command Build On-Day.
 M-XX: Reserved. (1/2)
 N-XX: Reserved. (2/2)
 O-XX: Option version. (1/2)
 P-XX: Option version. (2/2)

5. Press the Function key again to exit. The Function key light will turn off.

Function



Example Main Program Version: V01.00, 2013/06-01

0-01: Version
 1-00: Version
 2-20: Build On-Year.
 3-13: Build On-Year.
 4-06: Build On-Month.
 5-01: Build On-Day.

Example Keyboard CPLD Version: 0x030C

6-03: Keyboard CPLD Version.
 7-0C: Keyboard CPLD Version.

Example Analog CPLD Version: 0x0421

8-04: Analog CPLD Version.
 9-21: Analog CPLD Version.

Example Analog Board FPGA: 0x0241

A-02: Analog FPGA Version.
 B-41: Analog FPGA Version.

Example Kernel Version: 2013/01/22

C-20: Kernel Build On-Year.
D-13: Kernel Build On-Year.
E-01: Kernel Build On-Month.
F-22: Kernel Build On-Day.

Example Test Command Version: V01:00, 2013/06/01

G-01: Test Command Version.
H-00: Test Command Version.
I-20: Test Command Build On-Year.
J-13: Test Command Build On-Year.
K-06: Test Command Build On-Month.
L-01: Test Command Build On-Day.

Example Reserved:

M-XX: Reserved.
N-XX: Reserved.

Example Option version

O-XX: Option version. (1/2)
P-XX: Option version. (2/2)

Basic Operation

This section describes the basic operations required to operate the power supply.

- Setting OVP/OCP/UVL → from page 46
- C.V. priority mode → from page 49
- C.C. priority mode → from page 52
- Panel lock → page 54
- Save/Recall setups → from page 55/55
- Voltage Sense → from page 56

 
Before operating the power supply, please see the Getting Started chapter, page 9.

Setting OVP/OCP/UVL Levels

The OVP level and OCP level has a selectable range that is based on the output voltage and output current, respectively. The OVP and OCP level is set to the highest level by default. The actual selectable OVP and OCP range depends on the RSPS 150-10 model.

When one of the protection measures are on, ALM indicator is lit red on the front panel and the type of alarm is also shown on the display. The ALM_CLR button can be used to clear any protection functions that have been tripped. By default, the output will turn off when the OVP or OCP protection levels are tripped.

The UVL will prevent you from setting a voltage that is less than the UVL setting. The UVL setting range is from 0% ~ 105% of the rated output voltage.



Example: OVP alarm

Before setting the protection settings:

- Ensure the load is not connected.
- Ensure the output is turned off.



Note

You can use the Function settings (F-13 and F-14) to apply limits to the voltage and current settings, respectively. You can set limitations so that the values do not exceed the set OVP and the set OCP level, and so that the values are not lower than the set UVL trip point.

By using this feature, you can avoid turning the output off by mistakenly setting the voltage or current to a value that exceeds the set OVP or OCP level or to a value that is lower than the set UVL trip point.

If you have selected to limit the voltage setting (F-14), you will no longer be able to set the output voltage to a value that is above about 95% of the OVP trip point or to a value that is lower than the UVL trip point.

If you have selected to limit the current setting (F-13), you will no longer be able to set the output current to a value that is above about 95% of the OCP trip point.


Steps

1. Press the PROT key. The PROT key lights up.

PROT




- The OVP protection function will be displayed on the voltage display and the setting will be displayed on the current display.

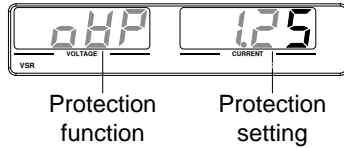

Choose a Protection Function

- Use the Voltage knob to select a protection function.

 Range OVP, OCP, UVL




Setting the Protection Level

- Use the Current knob to set the protection level for the selected function.

Setting Range

| OCP | OVP | UVL |
|------|-------|---------|
| 1~11 | 5~165 | 0~157.5 |

 

- Press PROT again to exit. The PROT key light will turn off.



Clear OVP/OCP/UVL protection


The OVP, OCP or UVL protection can be cleared after it has been tripped by holding the ALM_CLR button for 3 seconds.




Set to C.V. Priority Mode


When setting the power supply to constant voltage mode, a current limit must also be set to determine the crossover point. When the current exceeds the crossover point, the mode switches to C.C. mode. For details about C.V. operation, see page 22. C.C. and C.V. mode have two selectable slew rates: High Speed Priority and Slew Rate Priority. High Speed Priority will use the fastest slew rate for the instrument while Slew Rate Priority will use a user-configured slew rate.

| | |
|------------|---|
| Background | <p>Before setting the power supply to C.V. mode, ensure:</p> <ul style="list-style-type: none"> • The output is off. • The load is connected. |
|------------|---|


- | | | |
|-------|--|---|
| Steps | 1. Press the Function key. The Function key will light up. |  |
| | 2. The display will show the function (F-01) on the voltage display and the setting for the function in the current display. | |

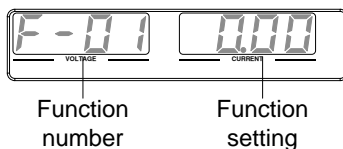

 3. Rotate the Voltage knob to change the F setting to F-03 (V-I Mode Slew Rate Select).




 
4. Use the Current knob to set the F-03 setting.



Set F-03 to 0 (CV High Speed Priority) or 2 (CV Slew Rate Priority).

F-03 0 = CV High Speed Priority
 2 = CV Slew Rate Priority

  5. Press the Voltage knob to save the configuration setting. ConF will be displayed when it is configuring.



VSR indicator for CV Slew
 Rate Priority (F-03=2)

6. If CV Slew Rate Priority was chosen as the operating mode, set F-04 (Voltage Slew Rate Up) and the F-05 (Voltage Slew Rate Down) and save.

F-04 / F- 0.001V~1.500V/msec
 05

7. Press the Function key again to exit the configuration settings. The function key light will turn off.



8. Use the Current knob to set the current limit (crossover point).



 
9. Use the Voltage knob to set the voltage.




Note

Notice the Set key becomes illuminated when setting the current or voltage. If the Voltage or Current knobs are unresponsive, press the Set key first.

10. Press the Output key. The Output ON LED becomes lit.



CV will become illuminated (center)

 

Note

Only the voltage level can be altered when the output is on. The current level can only be changed by pressing the Set key.

For more information on the Normal Function Settings, see page 93.

Set to C.C. Priority Mode

When setting the power supply to constant current mode, a voltage limit must also be set to determine the crossover point. When the voltage exceeds the crossover point, the mode switches to C.V. mode. For details about C.C. operation, see page 22. C.C. and C.V. mode have two selectable slew rates: High Speed Priority and Slew Rate Priority. High Speed Priority will use the fastest slew rate for the instrument while Slew Rate Priority will use a user-configured slew rate.

- Background** Before setting the power supply to C.C. mode, ensure:
- The output is off.
 - The load is connected.


Steps

1. Press the Function key. The Function key will light up.


Function



2. The display will show the function (F-01) on the voltage display and the setting for the function in the current display.

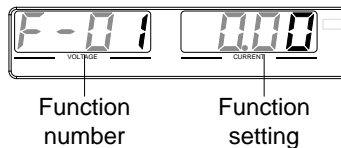

 3. Rotate the Voltage knob to change the F setting to F-03 (V-I Mode Slew Rate Select).





4. Use the Current knob to set the F-03 setting. Set F-03 to 1 (CC High Speed Priority) or 3 (CC Slew Rate Priority) and save.



F-03 1 = CC High Speed Priority
 3 = CC Slew Rate Priority

  5. Press the Voltage knob to save the configuration setting. ConF will be displayed when it is configuring.



ISR indicator for CC Slew
 Rate Priority (F-03=3)

 
6. If CC Slew Rate Priority was chosen as the operating mode, set F-06 (Current Slew Rate Up) and F-07 (Current Slew Rate Down) and save.

F-06 / F-07 0.001A~0.100A / msec



7. Press the Function key again to exit the configuration settings. The Function key light will turn off.



8. Use the Voltage knob to set the voltage limit (crossover point).



  
9. Use the Current knob to set the current.




Note

Notice the Set key becomes illuminated when setting the current or voltage. If the Voltage or Current knobs are unresponsive, press the Set key first.

 10. Press the Output key. The Output key becomes illuminated.



CC will become illuminated (right)

 

Note

Only the current level can be altered when the output is on. The voltage level can only be changed by pressing the Set key.

For more information on the Normal Function Settings, see page 93.

Panel Lock

The panel lock feature prevents settings from being changed accidentally. When activated, the Lock/Local key will become illuminated and all keys and knobs except the Lock/Local key and Output key (if active) will be disabled.

If the instrument is remotely controlled via the USB/LAN interface, the panel lock is automatically enabled.

Activate the panel lock

Press the Lock/Local key to activate the panel lock. The key will become illuminated.

Lock/Local



Disable the panel lock

Hold the Lock/Local key for ~3 seconds to disable the panel lock. The key's light will turn off.

Lock/Local



Unlock

Save Setup

 
The RSPS 150-10 has 3 dedicated keys (M1, M2, M3) to save the set current, set voltage, OVP, OCP and ULV settings.

Save Setup

1. Press the SHIFT key. The shift key will light blue.




2. Hold the desired memory key for >3 seconds (M1, M2, M3).



M1
(hold)

 3. When the setup is saved the unit will beep, the setup will be saved and the memory number will be shown on the display.



Saved setup

Recall Setup

 
The RSPS 150-10 has 3 dedicated keys (M1, M2, M3) to recall setups.

Save Setup

1. Press the SHIFT key. The shift key will light blue.




2. Hold the desired memory key to recall the desired setup (M1, M2, M3).



M1

 3. When the setup is recalled the setup will be loaded and the memory number will be shown on the display.



Recalled setup



Note

The F-15 function setting will determine whether the saved contents of the recalled memory setting are displayed or not.

Voltage Sense

The RSPS 150-10 power supplies can be operated using local or remote voltage sense. By default the RSPS 150-10 ships configured for local sense.

Remote Sense Connector

The Remote Sense connector includes a detachable plug to facilitate making the sense connections. The remote sense connector also has a safety cover.



WARNING

Ensure the output is off before handling the remote sense connector.

Use sense cables with a voltage rating exceeding the isolation voltage of the power supply.

Never connect sensing cables when the output is on. Electric shock or damage to the power supply could result.

Remote Sense Connector Overview


When using the remote sense connector make sure the wires that are used follow the following guidelines:

Wire gauge:

AWG 28 to AWG 16

Strip length:

5mm // 0.2 in.

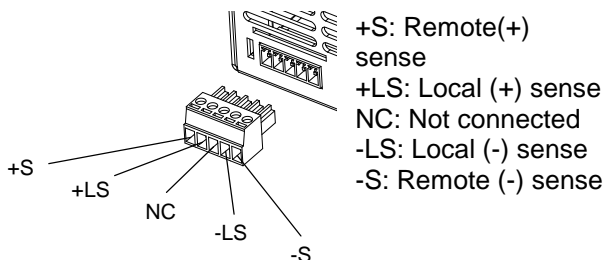

Remote Sense Cover



WARNING

Ensure the output is off before handling the remote sense connector.


Use sense cables with a voltage rating exceeding the isolation voltage of the power supply.

Never connect sensing cables when the output is on. Electric shock or damage to the power supply could result.

Always operate the RSPS 150-10 with the remote sense cover.

Connector


1. Place the cover over the remote sense connector.
2. Secure the cover with the provided screw.

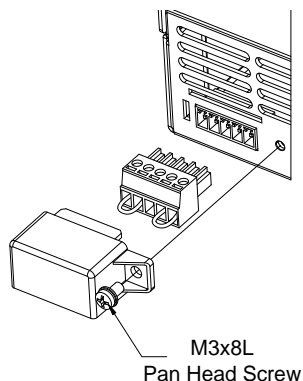

Local Sense

When using local sense, the sensing terminals are connected to the local sense terminals (via the local sense connections) and thus do not compensate for any possible voltage drop that is seen on the load cables. Local sense is only recommended when the voltage drop is of no consequence or for load-current applications. By default, the sense plug is already configured to local sensing.

Local Sense Connection

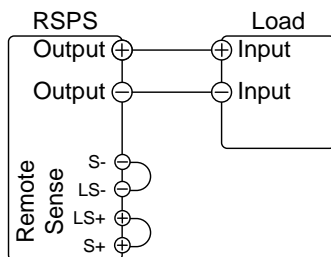

Page 56

Remote Sense

Remote sense is used to compensate for the voltage drop seen across load cables due to the resistance inherent in the load cables. The remote sense terminals are connected to the load terminals of the DUT to determine the voltage drop across the load cables.

Remote sense can compensate to 5 volts (compensation voltage, single line). Load cables should be chosen with a voltage drop less than the compensation voltage.

Although you can use remote sense to compensate up to 5V for a single line, it is recommended that the voltage drop is minimized to a maximum of 1V to prevent excessive output power consumption from the power supply and poor dynamic response to load changes.


WARNING

Ensure the output is off before connecting any sense cables.

Use sense cables with a voltage rating exceeding the isolation voltage of the power supply.


Never connect sensing cables when the output is on. Electric shock or damage to the power supply could result.


Note

Be sure to remove the sense jumpers from the remote sense connector so the unit is not using local sensing.

Single Load


1. Connect the S+ terminal to the positive potential of the load. Connect the S- terminal to the negative potential of the load.

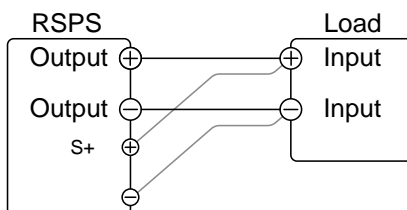

2. Operate the instrument as normal. See the Basic Operation chapter for details.

**Parallel RSPS
150-10 Units**


1. Connect the S+ terminals to the positive potential of the load. Connect the S- terminals to the negative potential of the load.

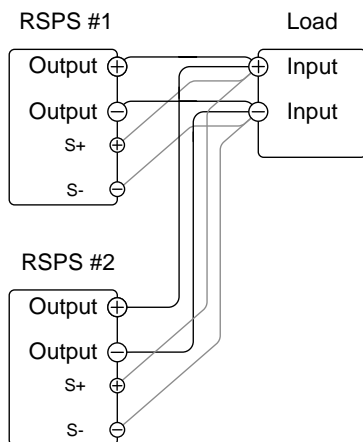

2. Operate the instrument as normal. Page 63
See the Parallel Operation chapter for details.

Serial RSPS 150-10 Units

1.
 - a. Connect the 1st S+ terminal to the positive potential of the load.
 - b. Connect the 1st S- terminal to the positive output terminal of the second RSPS 150-10 unit.
 - c. Connect the 2nd S+ terminal to the positive terminal of the second RSPS 150-10 unit.
 - d. Connect the 2nd S- terminal to negative terminal of the load.

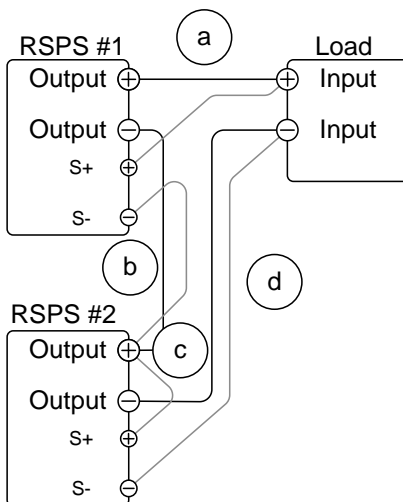


2. Operate the instrument as normal. Page 71
See the Serial Operation chapter
for details.

Wire Shielding
and Load line
impedance

To help to minimize the oscillation due to the inductance and capacitance of the load cables, use an electrolytic capacitor in parallel with the load terminals.

To minimize the effect of load line impedance use twisted wire pairing.

Shield the sense wires and connect the shield to the chassis ground.

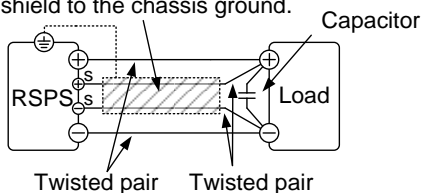

Parallel / Series Operation

This section describes the basic operations required to operate the power supply in series or parallel. Operating the RSPS 150-10 in parallel increases the total current output of the power supply units. When used in series, the total output voltage of the power supplies can be increased.

When the units are used in parallel or in series, a number of precautions and limitations apply. Please read the following sections before operating the power supplies in parallel or series.

- Master-slave parallel overview → from page 63
- Parallel connection → from page 65
- Parallel operation → from page 69
- Master-slave parallel calibration → from page 71
- Master-slave Series overview → page 73
- Series connection → page 75
- Series operation → from page 76


Master-Slave Parallel Overview

Background

When connecting the RSPS 150-10 power supplies in parallel, up to 4 units can be used in parallel and all units must be of the same model with similar output settings.

To use the power supplies in parallel, units must be used in a “master-slave” configuration. In the master-slave configuration a “master” power supply controls any other connected “slave” power supplies. In order for the master unit to control the slave units, the master unit must use the analog control connector to control the slave units.

When using the Analog Control Connector, the connector must be wired correctly between the master and each of the slave units. For the complete connector pin assignment, see page 108, or alternatively, the PSU-01C, PSU-02C and the PSU-03C cables can be used to connect a master to unit to 1, 2 or 3 slave units, respectively.

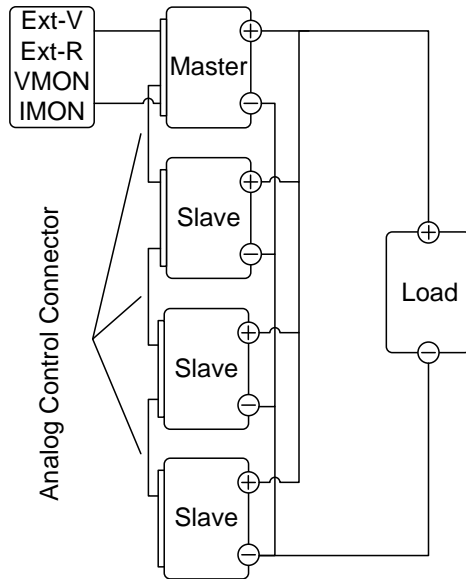

Limitations

Display

- Only the master unit will display the voltage and current.

OVP/ OCP/UVL

- Slave units follow the settings of the master when OVP/OCP/UVL is tripped on the master unit.

Remote monitoring

- Voltage monitoring (VMON) and current monitoring (IMON) are only supported on the master unit.
- The IMON current represents the total current of all the parallelized units.

Remote Sense

- Please see the remote sense chapter for details, page 58.

Parallel Calibration

- The parallel calibration function can be used to offset cables losses.

External Voltage and Resistance Control

- Voltage/Resistance controlled remote control can only be used with the master unit.
- The full scale current (in parallel) is equivalent to the maximum external voltage or resistance.

Internal Resistance

- For 2 units in parallel, the internal resistance is actually half of the setting value.
- For 3 units in parallel, the internal resistance is actually a third of the setting value.
- For 4 units in parallel, the internal resistance is actually a fourth of the setting value.
- See function setting F-08 for internal resistance settings, page 94.

Bleeder Control

- The Master unit is used to control the bleeder settings. The bleeder resistors in all the slave units are always turned off when in parallel mode.

| | Model | 1 unit | 2 units | 3 units | 4 units |
|-----------------|-------------|--------|---------|---------|---------|
| Output Voltage/ | RSPS 150-10 | 150V | 150V | 150V | 150V |
| Output Current | | 10A | 20A | 30A | 40A |


Master-Slave Parallel Connection

Analog Control Connection

To operate the power supplies in parallel with the analog connectors, connect the analog connectors on the master and slave units as shown in the diagrams below. Alternatively, preconfigured cables can be used:

PSU-01C: 1 master with 1 slave
 PSU-02C: 1 master with 2 slaves
 PSU-03C: 1 master with 3 slaves



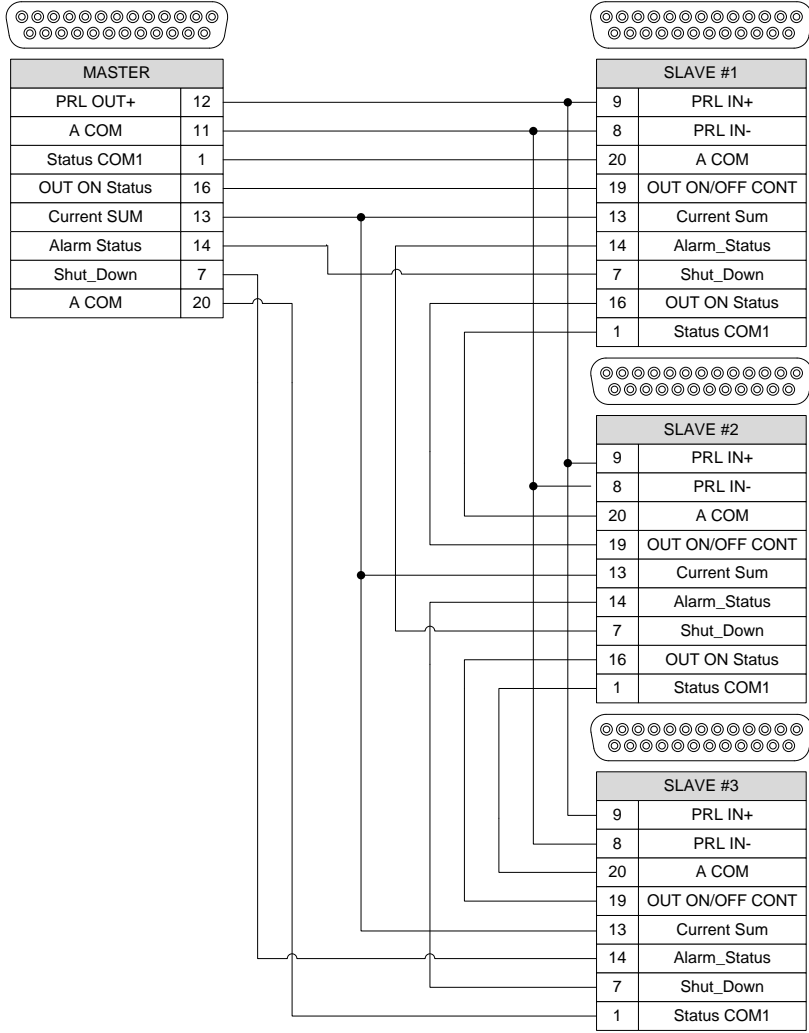



Note

- After the power supplies are connected in parallel, if you want to use the analog connector to control the power supplies, you must disassemble the cable of the master and then wire it yourself for control. Pin signal diagram is as shown below.



| MASTER | |
|-----------------|----|
| EXT-V/R CV CONT | 22 |
| A COM | 23 |
| EXT-V/R CC CONT | 21 |
| A COM | 23 |
| OUT ON/OFF CONT | 19 |
| A COM | 20 |

- The model of connecting in parallel has no place voltage problem and can be used in common ground.
- The model of connecting in series has high voltage due to the location. If analog control is to be used, it cannot be used in common ground and requires isolation control. Pin signal diagram is as shown below.




| MASTER | |
|-----------------|----|
| Isolated Analog | 22 |
| 0-10V | 23 |
| Isolated Analog | 21 |
| 0-10V | 23 |
| NO relay driven | 19 |
| By 24V DO | 20 |

Parallel Output Connection

If grounding the positive or negative terminals to the reference ground, be sure to ground the appropriate terminal on each unit (either positive or negative).

Example with
negative
terminal
connected to
ground

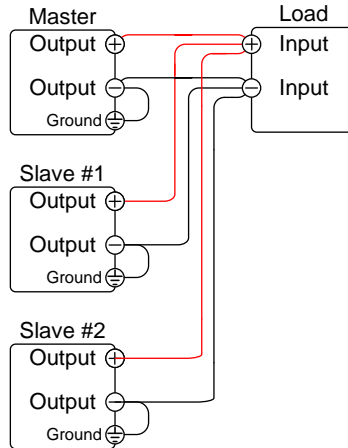

Steps

1. Ensure the power is off on all power supplies.
2. Choose a master and a slave unit(s).
3. Connect the analog connectors for the master and slave units as shown above.
4. Remove the Output Terminal covers. Page 39
5. Connect the master and slave unit in parallel as shown above.
6. Reattach the terminal covers. Page 39



Note

 
Ensure the load cables have sufficient Page 36
current capacity.

The load wires and remote sense wires should use twisted-paired wiring of the shortest possible length.

Master-Slave Parallel Operation

Master-Slave Configuration Before using the power supplies in parallel, the master and slave units need to be configured.

- Steps**
1. Configure the OVP, OCP and ULV settings for the master unit. Page 46
 2. For each unit, hold the Function key while turning the power on to enter the power on configuration settings.



3. Configure F-93 (Master/Slave) setting for each master/slave unit. Page 104

| Unit | F-93 |
|---------------------------------------|------|
| Independent (default setting) | 0 |
| Master unit with 1 slave in parallel | 1 |
| Master unit with 2 slaves in parallel | 2 |
| Master unit with 3 slaves in parallel | 3 |
| Slave (parallel) | 4 |

4. Cycle the power on the units (reset the power).



Note

Configuration settings can be checked on both the master and slave units by pressing the Function key and checking F-93.

Only the Master OVP, OCP and UVL settings are used for protection. Slave protection levels are disregarded.

 
OHP works independently for each unit.

Master-Slave Operation Only operate the power supplies in parallel if the units are configured correctly.


Steps

1. Turn on the master and slave units. The slave unit(s) will show a blank display.

Master unit



Slave units

 

2. Operation of all units is controlled via the master unit. Operation of the master unit is the same as for a single unit. See the Basic Operation chapter.

3. Press the Output key to begin. The output LED will become lit.

Output



Caution

Only operate the power supplies in parallel if using units of the same model number.



Note

The panel controls are disabled on slave units, including the output key. On slave units, only the Function key can be used to view the current settings.

Master-Slave Parallel Calibration


Master-Slave Configuration

The F-16 function setting can be used to calibrate the output of RSPS 150-10 units connected in parallel.

If you feel the accuracy is not good enough when you measure the accuracy in parallel mode, the parallel calibration can be used to get better measurement accuracy.


Steps

1. Short all the terminals together. This is best accomplished by connecting the master and all the slave units in parallel and then shorting the output terminals.

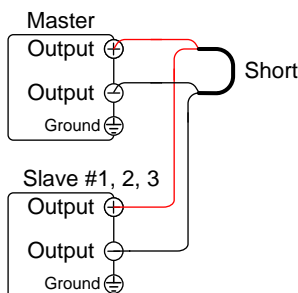


2. Connect the slave units to the master unit using the analog control connectors as described previously. Page 65
3. Configure F-93 (Master/Slave) setting for each master/slave unit, as described previously. Page 69
4. Cycle the power on the units (reset the power).

 5. On the master unit, set F-16 (Auto Calibration Parallel Control) to 2 to turn on the parallel calibration. Calibration will begin immediately.
6. Whilst calibration is being performed, *WAIT* will be displayed on the master screen. Calibration will take a few moments.



 7. When the calibration has finished, *OK* will be displayed on the master screen.



8. Remove the shorts from the terminals, and proceed with parallel operation.



Note


When performing parallel calibration, make sure the terminals are connected with cables or bus bars that are able to withstand the combined current capacity of all the units in parallel.

Master-Slave Series Overview

Background

When connecting RSPS 150-10 power supplies in series, up to 2 units can be used in series and all units must be of the same model. When operated in series, the power supplies can be used to increase the voltage output or setup the power supplies to output both positive and negative polarities. Unlike with the parallel operation, the series operation does not require any special configuration as each power supply is operated and controlled individually.

When the units are used in series, a number of precautions and limitations apply. Please read this overview before operating the power supplies in series.

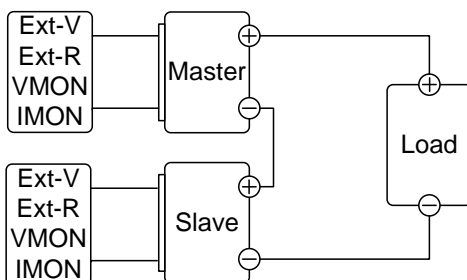

Limitations

Display

- Master and slave units display both the current and the voltage. The total voltage is the sum of the units.

OVP/OCP/UVL

- OVP, OCP and UVL level for each unit must be set separately.
- The OVP and OCP protections are tripped independently on the master and slave.

Remote monitoring

- Voltage monitoring (VMON) and current monitoring (IMON) should be performed on both units.
- The VMON voltage represents the voltage of that particular unit.

Remote Sense

- Please see the voltage sense chapter for details, page 56.

External Voltage and Resistance Control

- Voltage/Resistance controlled remote control should be used on both units separately.
- The full scale voltage (in series) is equivalent to the maximum external voltage or resistance.

Slew Rate

- The slave rate should be set for both units.

Internal Resistance

- The internal resistance should be set for both units.

Bleeder Control

- The bleeder resistor setting should be set equally on both units.



CAUTION

When using analog control connector to program or measure with RSPS 150-10 power supplies connected in series, make sure that each unit is separated and floating from each other.




WARNING

When RSPS 150-10 power supplies are connected in series and the load or one of the output terminals is grounded, no point on the output shall be more than $\pm 600\text{VDC}$ above or below chassis ground.


Series Connection

If using the RSPS 150-10 in series, please be aware that each unit acts independently and thus there are no special communication buses for serial connections.

Series
Connection to
increase Voltage
Output

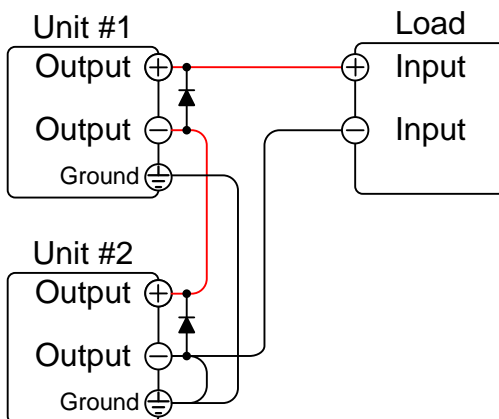

Series
Connection to
Output Positive
and Negative
Polarity

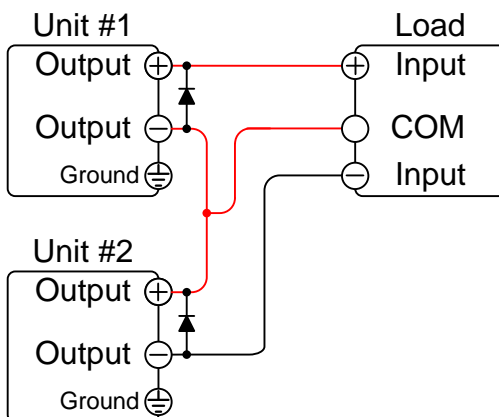



Note

The output reference ground (COMMON) can be grounded at the power supply side instead of the load, depending on the requirements. Local sensing should be used in this configuration.



Caution

When connecting the units in series, diodes should be connected across each output to prevent reverse voltage.

Steps

1. Ensure the power is off on both power supplies.
2. Connect the master and slave unit in series as shown above to either increase the voltage output or to create a positive and negative output. Remember that how the units are grounded depends on the configuration of the series connection.
3. Use diodes across the output terminals to prevent reverse voltage at startup or if one of the units unexpectedly shuts down. Ensure the diodes are rated to withstand the voltage and current output of the power supply.

4. Reattach the terminal cover.

Page 39



Note

Ensure load cables have sufficient current capacity.

Page 36

Series Operation

Series

Configuration

Before using the power supplies in series, the master and slave units need to be configured.

1. Configure the OVP, OCP and UVL settings for each unit.

Page 46

- For each unit, hold the Function key while turning the power on to enter the power on configuration settings.



- Make sure each unit is set to Independent (F-93 = 0). When using the power supplies in series, each unit is operated individually, and thus no unit is considered the master or slave.

Page 104

| Unit | F-93 |
|-------------|------|
| Independent | 0 |

- Cycle the power on the units (reset the power).



 
Note

Configuration settings can be checked for both the master and slave units by pressing the Function key.


Series Operation Only operate the power supplies in series if the units are configured correctly.

- Turn on both units. When connected in series unit will only show the voltage and current of their own unit.

Unit #1



Unit #2

 

2. Operation of both units is the same Page 46 as for a single unit. Each unit will only draw as much power as is programmed. Please see the basic operation chapter for details.
3. Press the Output key on each unit to begin. The output LED will become lit.

Output



CAUTION

Only operate the power supplies in series if using units of the same model number.

Only a maximum of 2 units can be used in series.



CAUTION

Ensure that the insulation capacity of the wiring is sufficient when connected in series. See page 29 for insulation capacity and grounding details.

Test Scripts

This section describes how to use the Test function to run, load and save test scripts for automated testing. The Test function is useful if you want to perform a number of tests automatically. The RSPS 150-10 test function can store ten test scripts in memory.

- Test script file format → from page 80
- Test script settings → from page 80
- Setting the test script settings → from page 81
- Load test script → from page 82
- Run test script → from page 83
- Export test script → from page 84
- Remove test script → from page 85

Test Script File Format

Background The test files are saved in *.tst file format.

Each file is saved as tXXX.tst, where XXX is the save file number 001~010.

Test Script Settings

Test Run Runs the chosen test script from the internal memory. A script must first be loaded into the internal memory before it can be run. See the test function Test Save, below.

The script will run as soon as the test function is started.

T-01 1~10

Test Copy Copies a test script from the USB drive to the designated save slot in memory. A script must first be copied into internal memory before it can be run.

T-02 1~10 (USB→RSPS 150-10)

Test Export Exports a script from the designated memory save slot to the USB drive.

T-03 1~10 (RSPS 150-10→USB)

Test Remove Deletes the chosen test file from the RSPS 150-10 internal memory.

T-04 1~10

Available Test Memory Shows the amount of space left in memory for tests.

T-05 Displays the available memory in bytes.

Setting the Test Script Settings


Steps The test script settings (T-01~T-10) are set with the Test key.

1. Press the Test key. The Test key will light up.




2. The display will show T-01 on the left and the memory no. for T-01 on the right.

The middle of the display will indicate if the desired file is available in memory or not. Y indicates Yes, N indicates No.

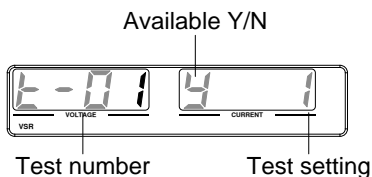


3. Rotate the Voltage knob to change the T setting (Test setting).

| | |
|-------------|------|
| Test Run | T-01 |
| Test Copy | T-02 |
| Test Export | T-03 |
| Test Remove | T-04 |

 


4. Rotate the Current knob to choose a memory number. (Excluding T-05)

 Range 1~10



 5. Press the Voltage knob to complete the setting.



Exit

Press the Test key again to exit the Test settings. The Test key light will turn off.



Load Test Script from USB

 
Overview

Before a test script can be run, it must first be loaded into a one of the 10 memory save slots. Before loading a test script into memory:


- Ensure the script file is placed in the root directory.
- Ensure the file name number corresponds to the memory number that you wish to save to. For example t001.tst can only be loaded into memory number #01, t002.tst into memory number #02, and so on.
- Use the T-05 setting to see how much memory is available in internal memory.

Steps

1. Insert a USB flash drive into the front panel USB-A slot. Ensure the flash drive contains a test script in the root directory.



 2. Turn on the power. MS ON (Mass Storage) will be displayed on the screen after a few seconds if the USB drive is recognized. Conversely, MS OFF will be displayed if removed.



Note

If the USB drive is not recognized, check to see that the function settings for F-20 = 1 (page 96). If not, reinsert the USB flash drive.

3. Configure T-02 (Test Copy) to 1~10 Page 81 (save memory slot)

 
T-02 1~10
range

4. OK will be displayed when completed.
5. The script will now be available in the memory slot the script was saved to.



Note

Error messages: If you load a file that is not present on the USB drive "Err 002" will be displayed on the display.



Run Test Script

Overview

A test script can be run from one of ten memory slots.

Steps

1. Before a test script can be run, it must first be loaded into one of the 10 memory save slots. Page 82

2. Configure T-01 (Run Test) to 1~10 Page 81
(save memory slot no. to run)

 
T-01 range 1~10

3. The test script will automatically start to run.



Note

Error messages: If you try to run a test script from an empty memory location “Err 003” will be displayed on the display.



Stop a Test

To stop (abort) a running test at any time, press the Test key. TEST STOP will be displayed and the unit will return to normal operation after a few moments.

TEST



Export Test Script to USB

 
Overview

The Export Test function saves a test file to the root directory of a USB flash drive.


- Files will be saved as tXXX.tst where XXX is the memory number 001~010 from which the test script was exported from.
- Files of the same name on the USB flash drive will be written over.

Steps

1. Insert a USB flash drive into the front panel USB-A slot.



 2. Turn on the power. MS (Mass Storage) will be displayed on the screen after a few seconds if the USB drive is recognized.



Note

If the USB drive is not recognized, check to see that the function settings for F-20 = 1 (page 95). If not, reinsert the USB flash drive.

3. Configure T-03 (Test Export) to 1~10 (save memory slot)
T-03 range 1~10

Page 81

 
4. The script will now be copied to the USB flash drive.

OK will be displayed when completed.



Note

Error messages: If you try to export a test script from an empty memory location "Err 002" will be displayed on the display.



Remove Test Script

Overview

The Remove Test function will delete a test script from the internal memory.

Steps

1. Select T-04 (Test Remove) and choose which test script to remove from the internal memory.
T-04 range 1~10

Page 81

2. The test script will be removed from the internal memory.

OK will be displayed when completed.



Note

Error messages: If you try to remove a test script from an empty memory location “Err 003” will be displayed on the display.



CONFIGURATION

| | |
|---|-----|
| Configuration Overview | 88 |
| Configuration Table | 88 |
| Normal Function Settings | 93 |
| Interface Configuration Settings | 96 |
| USB / GPIB Settings | 96 |
| LAN Settings | 97 |
| UART Settings | 98 |
| System Settings | 99 |
| Power On Configuration Settings | 100 |
| Trigger Input and Output Configuration Settings | 101 |
| Special Function | 103 |
| Setting Normal Function Settings | 103 |
| Setting Power On Configuration Settings | 104 |

Configuration Overview

Configuration of the RSPS 150-10 power supplies is divided into five different configuration settings: Normal Function, USB/GPIB, LAN, UART, System Configuration Settings, Power ON Configuration, Trigger Input/ Output Configuration Settings and Special Function Settings. Power ON Configuration differs from the other settings in that the settings used with Power ON

Configuration settings can only be set during power up. The other configuration settings can be changed when the unit is already on. This prevents some important configuration parameters from being changed inadvertently. Power On Configuration settings are numbered F-90 to F-98 and the other configuration settings are numbered F-00 to F-61, F-70 to F-78, F-88 to F-89 and F100 to F122. The Special Function Settings are used for calibration, firmware updated and other special functions; these functions are not supported for end-user use.





Configuration Table


Please use the configuration settings listed below when applying the configuration settings.

| Normal Function Settings | | |
|-----------------------------|---------|--|
| Settings | Setting | Setting Range |
| Output ON delay time | F-01 | 0.00s~99.99s |
| Output OFF delay time | F-02 | 0.00s~99.99s |
| V-I mode slew rate select | F-03 | 0 = CV high speed priority (CVHS) 1 = CC high speed priority (CCHS) 2 = CV slew rate priority (CVLS) 3 = CC slew rate priority (CVLS) |
| Rising voltage slew rate | F-04 | 0.001~1.500V/msec |
| Falling voltage slew rate | F-05 | 0.001~1.500V/msec |
| Rising current slew rate | F-06 | 0.001~0.100A/msec |
| Falling current slew rate | F-07 | 0.001~0.100A/msec |
| Internal resistance setting | F-08 | 0~15.00Ω |

| | | |
|--|------|--|
| Bleeder circuit control | F-09 | 0 = OFF, 1 = ON, 2 = AUTO |
| Buzzer ON/OFF control | F-10 | 0 = OFF, 1 = ON |
| OCF Delay Time | F-12 | 0.1 ~ 2.0 sec |
| Current Setting Limit (I-Limit) | F-13 | 0 = OFF, 1 = ON |
| Voltage Setting Limit (V-Limit) | F-14 | 0 = OFF, 1 = ON |
| Display memory parameter when recalling (M1, M2, M3) | F-15 | 0 = OFF, 1 = ON |
| Auto Calibration Parallel Control | F-16 | 0 = Disable, 1 = Enable, 2 = Execute Parallel Calibration and set to Enable. Note: Must be a short between each unit before starting. |
| Measurement Average Setting | F-17 | 0 = Low, 1 = Middle, 2 = High |
| Alarm Recovery and Output Status | F-18 | 0 = Safe Mode, 1 = Force Mode |
| Lock Mode | F-19 | 0: Lock Panel, Allow Output OFF 1: Lock Panel, Allow Output ON/OFF |
| USB/GPIB Settings | | |
| Show front panel USB status | F-20 | 0 = None, 1 = Mass Storage |
| Show rear panel USB status | F-21 | 0 = None, 1 = Linking to PC |
| Setup rear USB Speed | F-22 | 0 = Disable USB, 1 = Full Speed, 2 = Auto Detect Speed |
| GPIB Address | F-23 | 0 ~ 30 |
| GPIB Enable/Disable | F-24 | 0 = Disable GPIB, 1 = Enable GPIB |
| Show GPIB available status | F-25 | 0 = No GPIB, 1 = GPIB is available |
| SCPI Emulation | F-26 | 0 = GW Instek, 1 = TDK GEN, 2 = Agilent 5700, 3 = Kikusui PWX, 4 = AMREL SPS |
| LAN Settings | | |
| Show MAC Address-1 | F-30 | 0x00~0xFF |
| Show MAC Address-2 | F-31 | 0x00~0xFF |
| Show MAC Address-3 | F-32 | 0x00~0xFF |
| Show MAC Address-4 | F-33 | 0x00~0xFF |
 
| | | |
|------------------------------|------|---|
| Show MAC Address-5 | F-34 | 0x00~0xFF |
| Show MAC Address-6 | F-35 | 0x00~0xFF |
| LAN Enable | F-36 | 0 = OFF, 1 = ON |
| DHCP | F-37 | 0 = OFF, 1 = ON |
| IP Address-1 | F-39 | 0~255 |
| IP Address-2 | F-40 | 0~255 |
| IP Address-3 | F-41 | 0~255 |
| IP Address-4 | F-42 | 0~255 |
| Subnet Mask-1 | F-43 | 0~255 |
| Subnet Mask-2 | F-44 | 0~255 |
| Subnet Mask-3 | F-45 | 0~255 |
| Subnet Mask-4 | F-46 | 0~255 |
| Gateway-1 | F-47 | 0~255 |
| Gateway-2 | F-48 | 0~255 |
| Gateway-3 | F-49 | 0~255 |
| Gateway-4 | F-50 | 0~255 |
| DNS address -1 | F-51 | 0~255 |
| DNS address -2 | F-52 | 0~255 |
| DNS address-3 | F-53 | 0~255 |
| DNS address-4 | F-54 | 0~255 |
| Socket Server Enable/Disable | F-57 | 0 = Disable, 1 = Enable |
| Show Socket Server Port | F-58 | No setting |
| Web Server Enable/Disable | F-59 | 0 = Disable, 1 = Enable |
| Web Password Enable/Disable | F-60 | 0 = Disable, 1 = Enable |
| Web Enter Password | F-61 | 0000~9999 |
| UART Settings | | |
| UART Mode | F-70 | 0 = Disable UART, 1 = RS232, 2 = RS485 |
| UART Baud Rate | F-71 | 0 = 1200, 1 = 2400, 2 = 4800, 3 = 9600, 4 = 19200, 5 = 38400, 6 = 57600, 7 = 115200 |
| UART Data Bits | F-72 | 0 = 7 bits, 1 = 8 bits |
| UART Parity | F-73 | 0 = None, 1 = Odd, 2 = Even |
| UART Stop Bit | F-74 | 0 = 1 bit, 1 = 2 bits |
| UART TCP | F-75 | 0 = SCPI, 1 = TDK (emulation mode) |
 
| | | |
|---|------|---|
| UART Address (For multi-unit remote control) | F-76 | 00 ~ 30 |
| UART Multi-Drop control | F-77 | 0 = Disable, 1 = Master, 2 = Slave, 3 = Display information |
| UART Multi-Drop status | F-78 | Displayed parameter: AA-S AA: 00~30 (Address), S: 0~1 (Off-line/On-line status). |
| System Settings | | |
| Factory Set Value | F-88 | 0 = None 1 = Return to factory default settings |
| Show Version | F-89 | 0, 1 = Version 2, 3, 4, 5 = Build date (YYYYMMDD) 6, 7 = Keyboard CPLD 8, 9 = Analog Board CPLD A, B = Analog Board FPGA C, D, E, F = Kernel Build (YYYYMMDD) G, H = Test Command Version I, J, K, L = Test Command Build (YYYYMMDD) M, N = Reserved O, P = Option module |
| Power On Configuration Settings* | | |
| CV Control | F-90 | 0 = Control by Local 1 = Control by External Voltage 2 = Control by External Resistor - Rising  3 = Control by External Resistor - Falling  4 = Control by Isolated Board |
| CC Control | F-91 | 0 = Control by Local 1 = Control by External Voltage 2 = Control by External Resistor - Rising  3 = Control by External Resistor - Falling  4 = Control by Isolated Board |

| | | |
|---|---|--|
| Output Status when Power ON | F-92 | 0 = Safe Mode (Always OFF), 1 = Force Mode (Always ON), 2 = Auto Mode (Status before last time power OFF) |
| Master/Slave Configuration | F-93 | 0 = Independent 1 = Master with 1 slave in parallel 2 = Master with 2 slaves in parallel 3 = Master with 3 slaves in parallel 4 = Slave (parallel) |
| External Output Logic | F-94 | 0 = High ON, 1 = Low ON |
| Monitor Voltage Select | F-96 | 0 = 5V , 1 = 10V |
| Control Range | F-97 | 0 = 5V [5kΩ], 1 = 10V [10kΩ] |
| External Output Control Function | F-98 | 0 = OFF, 1 = ON |
| Trigger Input and Output Configuration Settings | | |
| Trigger Input Pulse Width | F100 | 0~60ms. 0 = trigger controlled by trigger level. |
| Trigger Input Action | F102 | 0 = None 1 = Output ON/OFF (refer to F103) 2 = Setting (refer to F104 & F105) 3 = Memory (refer to F106) |
| Output State When Receiving Trigger | F103 | 0 = OFF 1 = ON |
| Apply Voltage Setting on Trigger | F104 | 0 ~ rated voltage (only applicable when F102 =2) |
| Apply Current Setting on Trigger | F105 | 0 ~ rated current (only applicable when F102 =2) |
| Recall memory number | F106 | 1 ~ 3 (M1 ~ M3) |
| Trigger Output Pulse Width | F120 | 0 ~ 60ms. 0 = trigger output is set to the active level, not pulse width. |
| Trigger Output Level | F121 | 0 = LOW, 1 = HIGH (If F120 = 0) |
| Trigger Source | F122 | 0 = None 1 = Switching the output on or off 2 = Changing a setting 3 = Recalling a memory |
| Special Function Settings* | | |
| Calibration | F-00 | 0000 ~ 9999 |
|  *Note | Power On Configuration settings can only be set during power up. They can, however, be viewed under normal operation. | |

Normal Function Settings

Output ON Delay Time

Delays turning the output on for a designated amount of time. The Delay indicator will light when the Delay time is not 0.



Note

The Output ON Delay Time setting has a maximum deviation (error) of 20ms.

The Output ON Delay Time setting is disabled when the output is set to external control.



F-01 0.00s~99.99s

Output OFF Delay Time

Delays turning the output off for a designated amount of time. The Delay indicator will light when the Delay time is not 0.



Note

The Output OFF Delay Time setting has a maximum deviation (error) of 20ms.

The Output OFF Delay Time setting is disabled when the output is set to external control.



F-02 0.00s~99.99s

V-I Mode

Selects High Speed Priority or Slew Rate Priority for CV or CC mode. The voltage or current slew rate can only be edited if CC/CV Slew Rate Priority is selected. The ISR indicator will be lit for CC Slew Rate Priority and the VSR indicator will be lit for CV Slew Rate Priority.



 
Note

CC and CV Slew Rate Priority mode are disabled when voltage/current output is set to external control.

CC Slew Rate priority



CV Slew Rate Priority



F-03 0 = CV high speed priority
 1 = CC high speed priority
 2 = CV slew rate priority
 3 = CC slew rate priority

Rising Voltage Slew Rate Sets the rising voltage slew rate. Only applicable if V-I Mode is set to CV Slew Rate Priority.

F-04 0.001 ~ max. V/msec

Falling Voltage Slew Rate Sets the falling voltage slew rate. Only applicable if V-I Mode is set to CV Slew Rate Priority.

F-05 0.001 ~ max. V/msec

Rising Current Slew Rate Sets the rising current slew rate. Only applicable if V-I Mode is set to CC Slew Rate Priority.

F-06 0.001 ~ max. A/msec

Falling Current Slew Rate Sets the falling current slew rate. Only applicable if V-I Mode is set to CC Slew Rate Priority.

F-07 0.001 ~ max. A/msec

Internal Resistance Settings Sets the internal resistance of the power supply.
 F-08 0.000Ω ~ X.XXXΩ (Where X.XXX = Rating Voltage / Rating Current)

Bleeder Control Bleeder control turns ON/OFF the bleeder resistor. Bleeder resistors discharge the filter capacitors after power is turned off as a safety measure.

| | | |
|-----------------------------------|--|---|
| | F-09 | 0 = OFF, 1 = ON, 2 = AUTO |
| Buzzer ON/OFF | Turns the buzzer sound on or off. The buzzer is associated with alarm sounds and keypad entry sounds. | |
| | F-10 | 0 = OFF, 1 = ON |
| OCP Delay Time | Sets the OCP delay time. This parameter will delay the amount of time it takes to trigger the over current protection. This function can be useful to prevent current overshoot from triggering OCP. | |
| | F-12 | 0.1 ~ 2.0 sec |
| Current Setting Limit (I-limit) | Turns the current setting limit (I-limit) on or off. Turning this function on will prevent you from accidentally setting the current limit above the set OCP level. | |
| | F-13 | 0 = OFF, 1 = ON |
| Voltage Setting Limit | Turns the voltage setting limit (V-limit) on or off. Turning this function on will prevent you from accidentally setting the voltage limit above the OVP level. | |
| | F-14 | 0 = OFF 1 = ON |
| Display Memory Parameter | Displays which memory setting is recalled (M1, M2 or M3) when recalling a setup. | |
| | F-15 | 0 = OFF, 1 = ON |
| Auto Calibration Parallel Control | This function performs offset calibration for parallel control. There must be a short between each unit before starting the calibration. See page 71 for details. | |
| | F-16 | 0 = Disable, 1 = Enable, 2 = Execute Parallel Calibration and set to Enable |
| Measurement Average Setting | Determines the level of smoothing for the average setting. | |
| | F-17 | 0 = Low, 1 = Middle, 2 = High |

| | |
|----------------------------------|--|
| Alarm Recovery and Output Status | Set the output status when OHP, FAN and AC-Fail alarm be cleared. F-18 0 = Safe Mode, 1 = Force Mode |
|----------------------------------|--|

| | |
|-----------|--|
| Lock Mode | When the front panel is locked, the Lock Mode function determines the behavior of the Output key. F-19 0: Lock Panel, Allow Output OFF 1: Lock Panel, Allow Output ON/OFF |
|-----------|--|

Interface Configuration Settings

USB / GPIB Settings

| | |
|-----------------------------|--|
| Show Front Panel USB Status | Displays the front panel USB-A port state. This setting is not configurable. F-20 0 = None, 1 = Mass Storage |
|-----------------------------|--|

| | |
|----------------------------|--|
| Show Rear Panel USB Status | Displays the rear panel USB-B port state. This setting is not configurable. F-21 0 = None, 1 = Linking to PC |
|----------------------------|--|

| | |
|----------------------|---|
| Setup Rear USB Speed | Sets the rear panel USB speed or turns the rear USB port off. F-22 0 = Disable USB, 1 = Full Speed, 2 = Auto Detect Speed |
|----------------------|---|

| | |
|--------------|--|
| GPIB Address | Sets the GPIB address. F-23 0 ~ 30 |
|--------------|--|

| | |
|---------------------|--|
| GPIB Disable/Enable | Enable or disables the GPIB port. F-24 0 = Disable GPIB, 1 = Enable GPIB |
|---------------------|--|

| | |
|----------------------------|---|
| Show GPIB available Status | Shows the status of the GPIB option port. F-25 0 = No GPIB, 1 = GPIB is available |
|----------------------------|---|

| | |
|----------------|--|
| SCPI Emulation | Sets the SCPI emulation mode. The emulation modes allow you to emulate the remote commands of legacy equipment that is used in a test environment. Parameter 2, 3 and 4 are only supported as use stand alone. |
| F-26 | 0 = GW INSTEK, 1 = TDK GEN, 2 = Agilent N5700, 3 = Kikusui PWX, 4 = AMREL SPS |

LAN Settings

| | |
|------------------------------|---|
| Show MAC Address-1~6 | Displays the MAC address in 6 parts. This setting is not configurable. F-30~F-35 0x00~0xFF |
| LAN | Turns LAN on or off. F-36 0 = OFF, 1 = ON |
| DHCP | Turns DHCP on or off. F-37 0 = OFF, 1 = ON |
| IP Address-1~4 | Sets the default IP address. IP address 1~4 splits the IP address into four sections. (F-39 : F-40 : F-41 : F-42) (0~255 : 0~255 : 0~255 : 0~255) |
| Subnet Mask 1~4 | Sets the subnet mask. The subnet mask is split into four parts. (F-43 : F-44 : F-45 : F-46) (0~255 : 0~255 : 0~255 : 0~255) |
| Gateway 1~4 | Sets the gateway address. The gateway address is split into 4 parts. (F-47 : F-48 : F-49 : F-50) (0~255 : 0~255 : 0~255 : 0~255) |
| DNS Address 1~4 | Sets the DNS address. The DNS address is split into 4 parts. (F-51 : F-52 : F-53 : F-54) (0~255 : 0~255 : 0~255 : 0~255) |
| Socket Server Enable/Disable | Enables web socket connections. F-57 0 = Disable, 1 = Enable |

| | |
|-----------------------------|-----------------------------------|
| Show Socket Server | Shows the socket server port. |
| | F-58 No setting |
| Web Server Enable/Disable | Turns web server control on/off. |
| | F-59 0 = Disable, 1 = Enable |
| Web Password Enable/Disable | Turns a web password on/off. |
| | F-60 0 = Disable, 1 = Enable |
| Web Password | Sets the web password. |
| | F-61 0000 ~ 9999 |

UART Settings

| | |
|----------------|--|
| UART Mode | Sets the UART mode or disables UART. |
| | F-70 0 = Disable UART, 1 = RS232, 2 = RS485 |
| UART Baud Rate | Sets the UART baud rate. |
| | F-71 0 = 1200, 1 = 2400, 2 = 4800, 3 = 9600, 4 = 19200, 5 = 38400, 6 = 57600, 7 = 115200 |
| UART Data Bits | Sets the number of data bits. |
| | F-72 0 = 7 bits, 1 = 8 bits |
| UART Parity | Sets the parity. |
| | F-73 0 = None, 1 = Odd, 2 = Even |
| UART Stop Bit | Sets the number of stop bits. |
| | F-74 0 = 1 bit, 1 = 2 bits |
| UART TCP | UART transmission control protocol TCP settings. This is used primarily for multi-unit remote control, see page 159. |
| | Note: Please refer to the TDK Genesys Series user manual for the TDK control commands. |
| | F-75 0 = SCPI, 1 = TDK (emulation mode) |

 

 
| | |
|---|---|
| UART Address (For multi-unit remote control) | <p>UART Address: this is used to set the address of a unit when using multi-unit remote control, see page 159 for details.</p> <p>F-76 0 ~ 30</p> |
| UART Multi-Drop control | <p>Sets the master/slave/display-information parameters of a unit when using Multi-Drop remote control, see page 159 for details.</p> <p>F-77 0 = Disable, 1 = Master, 2 = Slave, 3 = Display Information</p> |
| UART Multi-Drop status | <p>Displays the Multi-Drop status on the master unit for each slave unit belonging to the Multi-Drop bus, see page 159 for details.</p> <p>F-78 Displayed parameter: AA-S AA: 00~30 (Address), S: 0~1 (Off-line/On-line status).</p> |


System Settings

| | |
|-------------------------------|---|
| Factory Default Configuration | <p>Returns the RSPS 150-10 to the factory default settings. See page 179 for a list of the default settings.</p> <p>F-88 0 = None, 1 = Factory Default.</p> |
| Show Version | <p>Displays the RSPS 150-10 version number, build date, keyboard CPLD, analog board CPLD, analog board FPGA, kernel build date, test command version and test command build date.</p> <p>0-XX = Version (1/2) 1-XX = Version (2/2) 2-XX = Build year (1/2) 3-XX = Build year (2/2) 4-XX = Build month 5-XX = Build day 6-XX = Keyboard CPLD (1/2) 7-XX = Keyboard CPLD (2/2) 8-XX = Analog board CPLD (1/2) 9-XX = Analog board CPLD (2/2) A-XX = Analog board FPGA (1/2) B-XX = Analog board FPGA (2/2) C-XX = Kernel build year (1/2)</p> <p>F-89</p> |

D-XX = Kernel build year (2/2)
E-XX = Kernel build month
F-XX = Kernel build day
G-XX = Test command version (1/2)
H-XX = Test command version (2/2)
I-XX = Test command build year (1/2)
J-XX = Test command build year (2/2)
K-XX = Test command build month
L-XX = Test command build day
M-XX = Reserved (1/2)
N-XX = Reserved (2/2)
O-XX = Option module (1/2)
P-XX = Option module (2/2)

Power On Configuration Settings

| | |
|------------|--|
| CV Control | Sets the constant voltage (CV) control mode between local and external voltage/resistance control. For external voltage control, see page 111 (External Voltage Control of Voltage Output) and page 115 (External Resistance Control of Voltage Output). For Isolated control, see page 132 for details. |
| F-90 | 0 = Control by local 1 = Control by external voltage 2 = Control by external resistor - rising  3 = Control by external resistor- falling  4 = Control by isolated board |
| CC Control | Sets the constant current (CC) control mode between local and external voltage/resistance control. For details on external voltage control, see page 113 (External Voltage Control of Current Output) and 118 (External Resistance Control of Current Output). For Isolated control, see page 132 for details. |
| F-91 | 0 = Control by local 1 = Control by external voltage 2 = Control by external resistor - rising  |
 
| | | |
|----------------------------------|---|--|
| | | 3 = Control by external resistor- falling  |
| | | 4 = Control by isolated board |
| Output Status when Power-ON | Sets the power supply to turn the output on or off at power up. | |
| Output | F-92 | 0 = Safe Mode (Always OFF), 1 = Force Mode (Always ON), 2 = Auto Mode (Status before last time Power OFF) |
| Master/Slave Configuration | Sets the power supply as master or slave. See the parallel/series operation for details, page 62. | |
| | F-93 | 0 = Independent 1 = Master with 1 slave in parallel 2 = Master with 2 slaves in parallel 3 = Master with 3 slaves in parallel 4 = Slave (parallel) |
| External Output Logic | Sets the external logic as active high or low for analog control pin 19. | |
| | F-94 | 0= High ON, 1 = Low ON |
| Monitor Voltage Select | Selects the voltage monitor output range. | |
| | F-96 | 0 = 5V, 1 = 10V |
| Control Range | Selects the external control range for external voltage or resistance control. | |
| | F-97 | 0 = 5V [5kΩ], 1 = 10V [10kΩ] |
| External Output Control Function | Set external output control on or off. | |
| | F-98 | 0 = OFF, 1 = ON |

Trigger Input and Output Configuration Settings

| | | |
|---------------------|--|--|
| Trigger Input Width | Sets the trigger input width in milliseconds. If the width is set to 0 then the input trigger is controlled by the input active level. | |
| | F100 | 0 ~ 60ms. 0 = trigger controlled by trigger level. |

| | |
|-------------------------------------|---|
| Trigger Input Action | Determines what actions are performed when a trigger is received. F102 0 = None 1 = Output ON/OFF (refer to F103) 2 = Setting (refer to F104 & F105) 3 = Memory (refer to F106) |
| Output State When Receiving Trigger | Applies the output state when receiving a trigger. F103 0 = OFF 1 = ON |
| Apply Voltage Setting on Trigger | Applies the setting voltage when a trigger is received. Only applicable when F102 = 2. F104 0 ~ the rated voltage |
| Apply Current Setting on Trigger | Applies the setting current when a trigger is received. Only applicable when F102 = 2. F105 0 ~ the rated current |
| Recall memory number | Recalls the selected memory when a trigger is received. 1 = M1 F106 2 = M2 3 = M3 |
| Trigger Output Pulse Width | Trigger output pulse width. A setting of 0 will output the active level. F120 0 ~ 60ms. 0 = output active level |
| Trigger Output Level | Sets the active level of the output trigger if the trigger output pulse width (F120) = 0. F121 0 = LOW 1 = HIGH |
| Trigger Source | Sets the trigger source. F122 0 = None 1 = Switching the output on/ off 2 = Changing a setting 3 = Recalling a memory |

Special Function

Special Function The special function setting is used to access calibration, firmware updates and other special functions. The special function setting has a password that is used to access the special function menu. The password used determines which function is accessed. Please see your distributor for details.

F-00 0000 ~ 9999

Setting Normal Function Settings

The Normal Function settings, F-01~F-61, F-70~F-78, F-88~F-89 and F100~F122 can be easily configured with the Function key.

- Ensure the load is not connected.
- Ensure the output is off.
- Function settings F-90~98 can only be viewed.



Note

Function setting F-89 (Show Version) can only be viewed, not edited.

Configuration settings F-90~ F-98 cannot be edited in the Normal Function settings. Use the Power On Configuration settings. See page 104 for details.

 
Steps

1. Press the Function key. The function key will light up.

Function




2. The display will show F-01 on the left and the configuration setting for F-01 on the right.




3. Rotate the Voltage knob to change the F setting.


 
Range F-00~F-61, F-70~F-78,
F-88~F-98, F100~F122



 4. Use the Current knob to set the parameter for the chosen F setting.



  Press the Voltage knob to save the configuration setting. ConF will be displayed when it is configuring.



Exit

Press the Function key again to exit the configuration settings. The Function key light will turn off.

Function



Setting Power On Configuration Settings

Background

The Power On Configuration settings can only be changed during power up to prevent the configuration settings being inadvertently changed.

 
- Ensure the load is not connected.
- Ensure the power supply is off.

Steps

1. Hold the Function key whilst turning the power on.




2. The display will show F-90 on the left and the configuration setting for F-90 on the right.




3. Rotate the Voltage knob to change the F setting.


 
Range F-90 ~ F-98



 4. Use the Current knob to set the parameter for the chosen F setting.



  Press the Voltage knob to save the configuration setting. ConF will be displayed when it is configuring.



Exit

Cycle the power to save and exit the configuration settings.

ANALOG CONTROL

The Analog Control chapter describes how to control the voltage or current output using an external voltage or resistance, monitor the voltage or current output as well as remotely turning off the output or shutting down the power supply.

| | |
|---|-----|
| Analog Remote Control Overview | 107 |
| Analog Control Connector Overview | 108 |
| External Voltage Control of Voltage Output | 111 |
| External Voltage Control of Current Output | 113 |
| External Resistance Control of Voltage Output | 115 |
| External Resistance Control of Current Output | 118 |
| External Control of Output | 120 |
| External control of Shutdown | 123 |
| Remote Monitoring | 125 |
| External Voltage and Current Monitoring | 125 |
| External Operation and Status Monitoring | 127 |
| External Trigger In/Out | 130 |
| Isolated Analog Control Option | 132 |
| Isolated Analog Control Option Specifications | 133 |
| 0~5V / 0~10V Option (PSU-ISO-V) | 133 |
| 4~20mA Option (PSU-ISO-I) | 133 |
| Isolated Analog Control Option Overview | 134 |
| Isolated External Voltage Control of Voltage Output | 135 |
| Isolated External Voltage Control of Current Output | 137 |
| Isolated External Current Control of Voltage Output | 140 |
| Isolated External Current Control of Current Output | 142 |
| Isolated External Voltage and Current Monitoring | 144 |

Analog Remote Control Overview

The RSPS 150-10 power supply series have a number of analog control options. The Analog Control connectors are used to control output voltage and current using external voltage or resistance. The power supply output can also be controlled using external switches.


There is also an isolated analog control option. The Isolated analog connector is used to control the output voltage and current using an isolated external voltage or current source. Like the analog connector, it can also be used to monitor the current and voltage output as well. Use part number PSU-ISO-V for voltage control and monitoring, and use PSU-ISO-I for current control and monitoring.

- Analog control connector overview → from page 108
- External voltage control of voltage output → from page 111
- External voltage control of current output → from page 113
- External resistance control of voltage output → from page 115
- External resistance control of current output → from page 118
- External control of output → from page 120
- External control of the shutdown → from page 123

Analog Control Connector Overview

Overview The Analog Control Connector is a 25 pin connector that can be used with the ARC (analog remote control) kit for wiring connections. The connector is used for all analog remote control. The pins used determine what remote control mode is used.

Pin Assignment

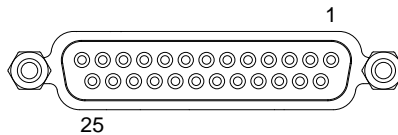

| Pin name | Pin number | Description |
|-------------|------------|--|
| Status COM1 | 1 | This is the common line for the status signal pins 2 to 3 and 14 to 16. |
| CV Status | 2 | This line is on when the RSPS 150-10 is in CV mode (photocoupler open collector output) ¹ . |
| CC Status | 3 | This line is on when the RSPS 150-10 is in CC mode (photocoupler open collector output) ¹ . |
| TRIG IN | 4 | Trigger signal input line (for test script only). |
| Status COM2 | 5 | This is the common line for status signal pins 4 and 17. |
| N.C. | 6 | Not connected. |
| Shutdown | 7 | Output shutdown control line. The output is turned off when a low level TTL signal is applied. |
| PRL IN- | 8 | Negative input line for master-slave parallel operation. |
| PRL IN+ | 9 | Positive input line for master-slave parallel operation. |
| Alarm Clear | 1 | Alarm clear line. |
| | 0 | Alarms are cleared when a low level TTL signal is applied. |

| | | |
|-----------------|--------|--|
| A COM | 11 | This is the common line for the external signal pins 7 to 10, 12, 13, 19, 21, 22, 24, and 25. It is connected internally to the negative output. |
| PRL OUT+ | 1 2 | Positive output line for master-slave parallel operation. |
| Current Sum | 1 3 | Current signal line for master-slave parallel operation. |
| Alarm Status | 1 4 | On when a protection function (OVP, HW OVP, OCP, OHP, FAN or SEN) has been activated or when an output shutdown signal is being applied (open-collector photocoupler output). ¹ |
| PWR ON Status | 1 5 | Outputs a low level signal when power is turned on. (open-collector photocoupler output). ¹ |
| OUT ON Status | 1 6 | On when the output is on (open-collector photocoupler output). ¹ |
| TRIG OUT | 1 7 | Trigger signal output line (for test script only). |
| N.C. | 1 8 | Not connected. |
| OUT ON/OFF CONT | 1 9 | Output on/off line. On when set to a low level TTL signal, Off when set to a high level TTL signal. (F-94: 1) On when set to a high level TTL signal, Off when set to a low level TTL signal. (F-94: 0) |
| A COM | 2 0 | This is the common line for the external signal pins 7 to 10, 12, 13, 19, 21, 22, 24, and 25. It is connected internally to the negative output. |
| EXT-V/R CC CONT | 2 1 | This line uses an external voltage or resistance to control the output current. External voltage control (F-91: 1); External resistor control (F-91: 2, F-91: 3). 0 to 5V or 0 to 5kΩ; 0 % to 100 % of the rated output current (F-97: 0). 0 to 10V or 0 to 10kΩ; 0 % to 100 % of the rated output current (F-97: 1). |

| | |
|--------------------|---|
| EXT-V/R CV CONT | <p>2 This line uses an external voltage or resistance to control the output voltage.</p> <p>2 External voltage control (F-90: 1); External resistor control (F-90: 2, F-90: 3).</p> <p>0 to 5V or 0 to 5kΩ; 0 % to 100 % of the rated output voltage (F-97: 0).</p> <p>0 to 10V or 0 to 10kΩ; 0 % to 100 % of the rated output voltage (F-97: 1).</p> |
|--------------------|---|

| | |
|-------|---|
| A COM | <p>2 This the common line for the external signal</p> <p>3 pins 7 to 10, 12, 13, 19, 21, 22, 24, and 25. It is connected internally to the negative output.</p> |
|-------|---|

| | |
|-------|---|
| I MON | <p>2 Output current monitor.</p> <p>4 0 % to 100 % of the rated output current is generated as a voltage between 0V and 5V (F-96: 0) or a voltage between 0V and 10V (F-96: 1).</p> |
|-------|---|

| | |
|-------|---|
| V MON | <p>2 Output voltage monitor.</p> <p>5 0 % to 100 % of the rated output voltage is generated as a voltage between 0V and 5V (F-96: 0) or a voltage between 0V and 10V (F-96: 1).</p> |
|-------|---|

1. Open collector output: 30V max, 8mA max.

The common line for the status pins is floating (isolated voltage of 60 V or less). It is isolated from the control circuit.

External Voltage Control of Voltage Output

Background External voltage control of the voltage output is accomplished using the analog control connector on the rear panel. There are two external voltage control ranges, 0~5V and 0~10V, depending on the F-97 configuration. See page 101 for details.


For 0~10V:

Output voltage = full scale voltage x (external voltage/10)

For 0~5V:


Output voltage = full scale voltage x (external voltage/5)

Connection When connecting the external voltage source to the analog connector, use shielded or twisted paired wiring.

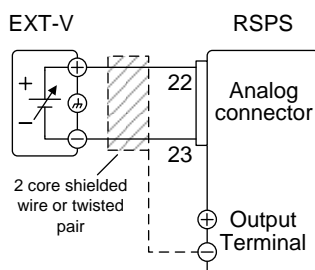

- Pin23 → EXT-V (-)
- Pin22 → EXT-V (+)
- Wire shield → negative (-) output terminal

Connection- alt. shielding If the wire shield needs to be grounded at the voltage source (EXT-V), then the shield cannot also be grounded at the negative (-) terminal output of the RSPS 150-10 power supply. This would short the output.

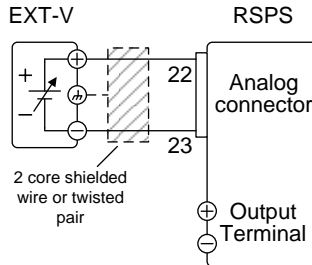

- Pin23 → EXT-V(-)
- Pin22 → EXT-V(+)
- Wire shield → EXT-V ground (GND)

Panel operation 1. Connect the external voltage according to the connection diagrams above.

2. Set the F-90 power on configuration setting to 1 (CV control – Ext voltage).

Page 104

- Be sure to cycle the power after the power on configuration has been set.

3. Press the Function key and confirm the new configuration settings (F-90=1).

Function



4. Press the Output key. The voltage can now be controlled with the External voltage.

Output





Note

The input impedance for external voltage control is 1MΩ.

Use a stable voltage supply for the external voltage control.



Note

CV and CC Slew Rate Priority are disabled for V-I mode (F-03) when using external voltage control. See the normal function settings on page 93.



CAUTION

Ensure no more than 10.5V (F-97 = 1) or 5.25 (F-97 = 0) volts are input into the external voltage input.

Ensure the voltage polarity is correct when connecting the external voltage.

External Voltage Control of Current Output

Background

External voltage control of the current output is accomplished using the analog control connector on the rear panel. There are two external voltage control ranges, 0~5V and 0~10V, depending on the F-97 configuration. See page 101 for details.


For 0~10V:

Output current = full scale current x (external voltage/10)

For 0~5V:


Output current = full scale current x (external voltage/5)

Connection When connecting the external voltage source to the connectors, use shielded or twisted paired wiring.

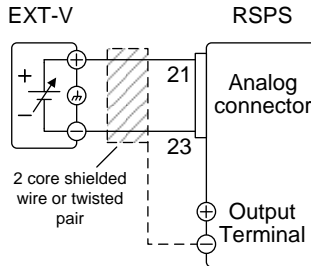



- Pin23 → EXT-V (-)
- Pin21 → EXT-V (+)
- Wire shield → negative (-) output terminal

Connection- alt. shielding If the wire shield needs to be grounded at the voltage source (EXT-V), then the shield cannot also be grounded at the negative (-) terminal output of the RSPS 150-10 power supply. This would short the output.

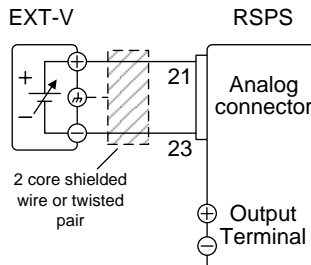

- Pin23 → EXT-V (-)
- Pin21 → EXT-V (+)
- Wire shield → EXT-V ground (GND)

  Steps 1. Connect the external voltage according to the connection diagrams above.

2. Set the F-91 power on configuration setting to 1 (CC control – Ext voltage). Page 104
- Be sure to cycle the power after the power on configuration has been set.
3. Press the Function key and confirm the new configuration settings (F-91=1). 
4. Press the Output key. The current can now be controlled with the External voltage. 

**Note**

The input impedance for external voltage control is 1MΩ.

Use a stable voltage supply for the external voltage control.

**Note**

CV and CC Slew Rate Priority are disabled for V-I mode (F-03) when using external voltage control. See the normal function settings on page 93.

**CAUTION**

Ensure the voltage polarity is correct when connecting the external voltage.

Ensure no more than 10.5V (F-97 = 1) or 5.25 (F-97 = 0) volts are input into the external voltage input.

External Resistance Control of Voltage Output

Background

External resistance control of the voltage output is accomplished using the analog control connector on the rear panel.

There are two external resistance control ranges,



0~5k Ω and 0~10k Ω , depending on the F-97 configuration. See page 101 for details.

The output voltage (0 to full scale) can be controlled with the external resistance rising 0k Ω ~5k Ω /0k Ω ~10k Ω or falling 5k Ω ~0k Ω /10k Ω ~0k Ω .

Rising:

For 0k Ω ~10k Ω : Output voltage = full scale voltage \times (external resistance/10)

For 0k Ω ~5k Ω : Output voltage = full scale voltage \times (external resistance/5)

Falling:

For 10k Ω ~0k Ω : Output voltage = full scale voltage \times ([10-external resistance]/10)

For 5k Ω ~0k Ω : Output voltage = full scale voltage \times ([5-external resistance]/5)




Note

The falling resistance configuration is recommended for safety reasons. In the event that the cables become accidentally disconnected (high Ω), the voltage output will drop to zero. Under similar circumstances using the rising resistance configuration, an unexpectedly high voltage would be output.



If switches are used to switch between fixed resistances, use switches that avoid creating open circuits. Use short-circuit or continuous resistance switches.

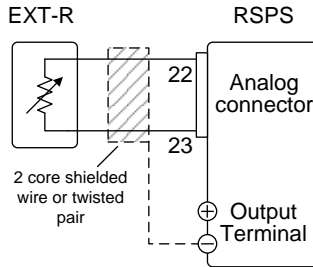Connection



- Pin22 → EXT-R
- Pin23 → EXT-R
- Wire shield → negative (-) output terminal

Steps

1. Connect the external resistance according to the connection diagrams above.
2. Set the F-90 (CV Control) configuration settings to 2 for Ext-R rising or 3 for Ext-R falling. Page 104
3. Press the Function key and confirm the new configuration settings (F-90=2 or 3). Function 
4. Press the Output key. The voltage can now be controlled with the External resistance. Output 



Note

Ensure the resistor(s) and cables used exceed the isolation voltage of the power supply. For example: insulation tubes with a withstand voltage higher than the power supply can be used.

When choosing an external resistor ensure the resistor can withstand a high degree of heat.



Note

CV and CC Slew Rate Priority are disabled for V-I mode (F-03) when using external resistance control. See the normal function settings on page 93.

External Resistance Control of Current Output

Background

External resistance control of the current output is accomplished using the analog connector on the rear panel.

There are two external resistance control ranges, 0~5k Ω and 0~10k Ω , depending on the F-97 configuration. See page 101 for details.

The output current (0 to full scale) can be controlled with the external resistance rising 0k Ω ~5k Ω /0k Ω ~10k Ω or falling 5k Ω ~0k Ω /10k Ω ~0k Ω .

Rising:

For 0k Ω ~10k Ω : Output current = full scale current \times (external resistance/10)

For 0k Ω ~5k Ω : Output current = full scale current \times (external resistance/5)

Falling:

For 10k Ω ~0k Ω : Output current = full scale current \times ([10-external resistance]/10)


For 5k Ω ~0k Ω : Output current = full scale current \times ([5-external resistance]/5)


Note

The falling resistance configuration is recommended for safety reasons. In the event that the cables become accidentally disconnected, the current output will drop to zero (high Ω). Under similar circumstances using the rising configuration, an unexpectedly high current would be output.

If switches are used to switch between fixed resistances, use switches that avoid creating open circuits. Use short-circuit or continuous resistance switches.

Connection

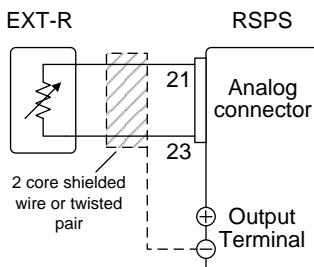

- Pin21 → EXT-R
- Pin23 → EXT-R
- Wire shield → negative (-) output terminal

 
Steps

1. Connect the external resistance according to the connection diagrams above.
2. Set the F-91 (CC Control) configuration settings to 2 for external resistor rising or to 3 for external resistor falling. Page 104
3. Press the Function key and confirm the new configuration settings (F-91 = 2 or 3).

Function



4. Press the Output key. The current can now be controlled with the External resistance.



Note

Ensure the resistor(s) and cables used exceed the isolation voltage of the power supply. For example: insulation tubes with a withstand voltage higher than the power supply can be used.

When choosing an external resistor ensure the resistor can withstand a high degree of heat.



Note

CV and CC Slew Rate Priority are disabled for V-I mode (F-03) when using external resistance control. See the normal function settings on page 93.

External Control of Output


Background

The output can be turned on or off externally using a switch. The analog control connector can be set to turn the output on from a high or low signal. The voltage across pins 19 and 20 are internally pulled up to +5V $\pm 5\%$ @ 500uA with 10k Ω pull-up resistor. A short (closed switch) produces a low signal.

When set to High = On, the output is turned on when the pins 19-20 are open.


When Low = On, the output is turned on when pins 19-20 are shorted.

Connection

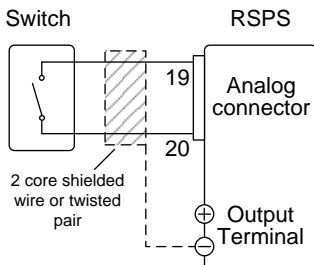

- Pin19 → Switch
- Pin20 → Switch
- Wire shield → negative (-) output terminal

 
Steps

1. Connect the external switch according to the connection diagrams above.
2. Set F-94 (External output logic) in Page 104 the power on configuration settings to 0 (High = On) or 1 (Low = On) and set F-98 (External output control function) to 1(On).
3. Press the Function key and confirm the new configuration settings (F-94 = 0 or 1 and F-98=1). 
4. The switch is now ready to set the output on or off.



Note

When using a switch over long distances, please use a switch relay to extend the line from the coil side of the relay.

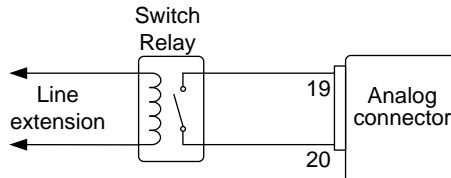

If a single switch control is to be used for multiple units, please isolate each instrument. This can be achieved by using a relay.



Warning

Ensure the cables used and the switch exceed the isolation voltage of the power supply. For example: insulation tubes with a withstand voltage higher than the power supply can be used.

 


Note


Messages: If F-94 = 0 (High = on) and pin 19 is low (0) "MSG 001" will be displayed on the display.

If F-94 = 1 (Low = on) and pin 19 is high (1) "MSG 002" will be displayed on the display.

Output off (High=on)




Output off (Low=on)

 

External control of Shutdown

Background The output of the power supplies can be configured to shut down via an external switch. The voltage across pins 7 and 20 are internally pulled to +5V $\pm 5\%$ @ 500uA with 10k Ω pull-up resistor. The output is turned off when a low TTL level signal is applied.

Connection

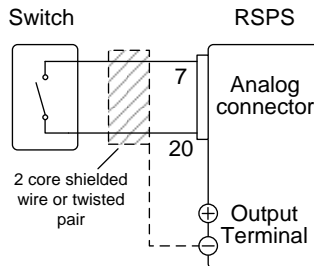


- Pin7 \rightarrow Switch
 - Pin20 \rightarrow Switch
 - Wire shield \rightarrow negative (-) output terminal
-

Steps

1. Connect the external switches according to the connection diagrams above.
 2. The switch will now shut down the power supply when shorted.
-

**Note**

When using a switch over long distances, please use a switch relay to extend the line from the coil side of the relay.

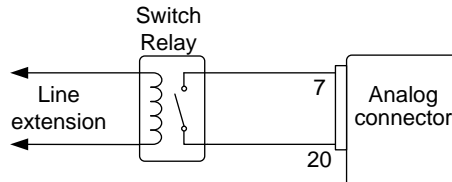

If a single switch control is to be used for multiple units, please isolate each instrument. This can be achieved by using a relay.

**Warning**

Ensure the cables and switch used exceed the isolation voltage of the power supply. For example: insulation tubes with a withstand voltage higher than the power supply can be used.

Remote Monitoring

The RSPS 150-10 power supplies have remote monitoring support for current and voltage output. They also support monitoring of operation and alarm status.

- External monitoring of output voltage and current → from page 125
- External monitoring of operation mode and alarm status → from page 127
- External Trigger In/Out → from page 130

External Voltage and Current Monitoring

Background

The analog connector is used to monitor the current (IMON) or voltage (VMON) output.

An output of 0~10V or 0~5V (depending on the configuration) represents the voltage or current output of 0~ rated current/voltage output.


- $IMON = (\text{current output/full scale}) \times 10 \text{ or } 5.$
- $VMON = (\text{voltage output/full scale}) \times 10 \text{ or } 5.$

Configuration

The RSPS 150-10 doesn't need to be configured to use external voltage or current monitoring, however the voltage or current output range does need to be configured. The monitor output voltage can be configured as either 0~10V or 0~5V.


Set F-96 (Monitor Voltage Select) Page 104 in the power on configuration settings to 0 (5V) or 1 (10V).

Be sure to cycle the power after setting the power on configuration settings.

1. Press the Function key and confirm the new configuration settings (F-96 = 0 or 1). 


2. An external DMM can now be used to monitor the voltage or current output.

VMON Connection

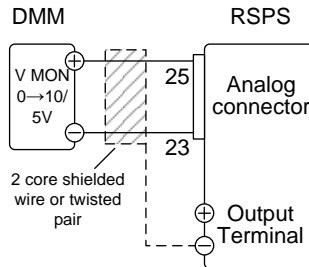

- Pin25 → Pos (+)
- Pin23 → Neg (-)

IMON Connection

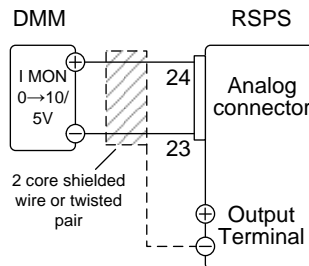

- Pin24 → Pos (+)
- Pin23 → Neg (-)



Note

Maximum current is 5mA. Ensure the sensing circuit has input impedance greater than 1MΩ.

The monitor outputs are strictly DC and should not be used to monitor analog components such as transient voltage response or ripple etc.



CAUTION

Ensure IMON (pin 24) and VMON (pin 25) are not shorted together. This may cause damage to the unit.

External Operation and Status Monitoring


Background The analog control connector can also be used to monitor the status operation and alarm status of the instrument.

The pins are isolated from the power supply internal circuitry by photo couplers. Status Com1 (Pin 1) and Status Com2 (Pin 5) are photo coupler emitter outputs, whilst pins 2~3, 14~17 are photo coupler collector outputs.

A maximum of 30V and 8mA can be applied to each pin. The Status Com pin is floating with an isolation voltage of 60V.


| Pinout | Name and Pin | Description |
|--------|------------------|--|
| | STATUS COM1 1 | Common (photo coupler emitter) for status signals 2, 3, 14, 15 and 16. |
| | CV STATUS 2 | Low when CV mode is active. |
| | CC STATUS 3 | Low when CC mode is active. |
| | ALM STATUS 14 | Low when any of the protection modes are tripped (OVP, OCP, Sense_ALM, OTP_M, AC Fail, OTP_S, Fan_Fail, HW_OVP, and Shutdown). Active low. |
| | PWR ON STATUS 15 | Active low. |
| | OUT ON STATUS 16 | Low when the output is on. |

 Schematic




Timing diagrams Below are 4 example timing diagrams covering a number of scenarios. Note that pins 14~16 are all active low.


CV MODE: The diagram below shows the timing diagram
Output turned on when the output is turned on when the RSPS 150-10 is set to CV mode.

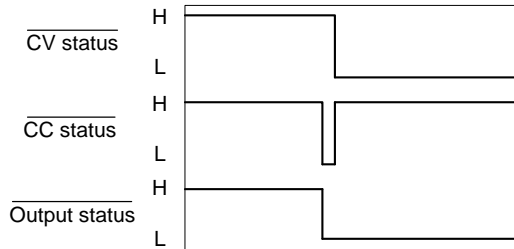


CV MODE: The diagram below shows the output status lines
Output turned off when the output is turned off in CV mode.

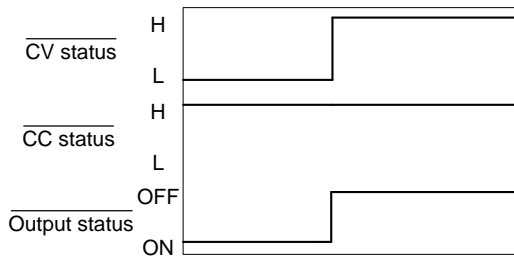

CC MODE: The diagram below shows the timing diagram
Output turned on when the output is turned on when the RSPS 150-10 is set to CC mode.

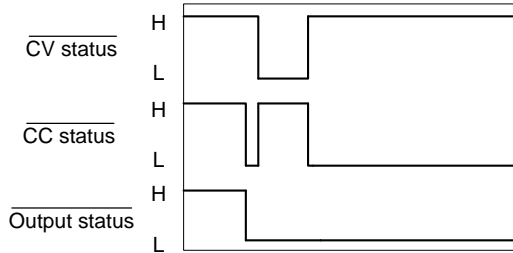

CC MODE: The diagram below shows the output status lines
Output turned off when the output is turned off in CC mode.

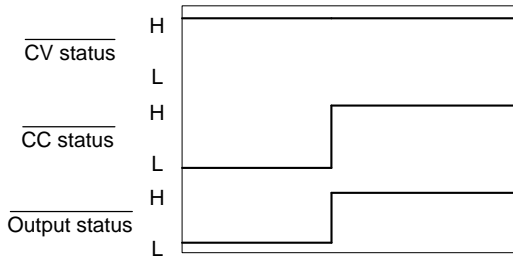

External Trigger In/Out

Background Pin 4 is used for the external trigger input and pin 17 is used as the trigger output. Pin 5 is the common for both pins.


The trigger input can be configured to perform an action such as toggling the output on/off, load a memory setting or apply a voltage/current setting when a trigger is received. The trigger input pulse width can also be configured.

The trigger output can be configured to be active when the output is turned on/off, a setting is changed or when a memory setting has been recalled. The trigger output pulse width or level polarity can also be configured.

See page 101 for details on the trigger input and trigger output configuration settings.

| Pinout | Name and Pin | | Description |
|--------|--------------|----|---|
| | STATUS | 5 | Common (photo coupler emitter) for trigger pins 4, 17. |
| | TRIG IN | 4 | External trigger input |
| | TRIG OUT | 17 | The TRIG OUT signal is held high by an internal 330Ω resistor. The trigger output is pulsed or held high/low for each trigger (depending on the trigger configuration). |

Schematic

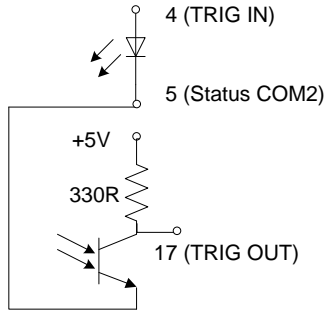

Isolated Analog Control Option

The RSPS 150-10 power supplies can use the isolated analog connector for external control and remote monitoring.

- Isolated analog control option specifications → 133
- Isolated analog control option overview → 134
- Isolated external voltage control of voltage output → 135
- Isolated external voltage control of current output → 137
- Isolated external current control of voltage output → 140
- Isolated external current control of current output → 142
- Isolated external voltage and current monitoring → 144

Isolated Analog Control Option Specifications

0~5V / 0~10V Option (PSU-ISO-V)

| | | |
|---|-------------------------|---|
| External voltage control output voltage | % | Accuracy and linearity: $\pm 1\%$ of rated output voltage |
| External voltage control output current | % | Accuracy and linearity: $\pm 1\%$ of rated output current |
| Temperature coefficient | ppm/ $^{\circ}\text{C}$ | 100ppm/ $^{\circ}\text{C}$ of rated voltage or current, after a 30 minute warm-up |
| Programming input impedance | Ohm | 1M |
| Absolute maximum voltage | V | 0~10.5V |
| Output voltage monitor | % | Accuracy: $\pm 1.5\%$ |
| Output current monitor | % | Accuracy: $\pm 1.5\%$ |
| Monitor output impedance | Ohm | 100 |

4~20mA Option (PSU-ISO-I)

| | | |
|---|-------------------------|--|
| External current control output voltage | % | Accuracy and linearity: $\pm 1\%$ of rated output voltage |
| External current control output current | % | Accuracy and linearity: $\pm 1\%$ of rated output current |
| Temperature coefficient | ppm/ $^{\circ}\text{C}$ | 200ppm/ $^{\circ}\text{C}$ of rated voltage or current, after a 30 minute warm-up. |
| Programming input impedance | Ohm | 50 |
| absolute maximum voltage | mA | 4~21mA |
| Output voltage monitor | % | Accuracy: $\pm 1.5\%$ |
| Output current monitor | % | Accuracy: $\pm 1.5\%$ |

Isolated Analog Control Option Overview

 
Overview The Isolated Analog Connectors are 8 pin sockets that are optically isolated from the power supply, allowing inputs with ground references that differ to the power supply. The isolated options include either an isolated voltage (0~5V/0~10V) interface or an isolated current (4~20mA) interface. Only one type of isolated interface can be used at any one time. The pins used determine what remote control mode is used.




Note

The GPIB Option (PSU-GPIB), the isolated voltage option (PSU-ISO-V) and the isolated current option (PSU-ISO-I) all use the same option slot, meaning that only one of the three options can be used at any one time.

Pin Assignment Isolated Voltage Connector



Isolated Current Connector

 

| Pin name | Pin number | Description |
|------------|------------|--|
| SHIELD | 1 | Shield, connected internally to the chassis of the power supply. |
| +VPROG_ISO | 2 | Output Voltage programming input. |
| +IPROG_ISO | 3 | Output Current programming input. |
| GND_ISO | 4 | Ground for programming signals. |
| GND_ISO | 5 | Ground for programming signals. |
| +VMON_ISO | 6 | Output Voltage monitoring output. |
| +IMON_ISO | 7 | Output Current monitoring output. |
| Shield | 8 | Shield, connected internally to the chassis of the power supply. |


Isolated External Voltage Control of Voltage Output

Background Voltage control of the voltage output uses the isolated voltage option (PSU-ISO-V). A voltage of 0~5V or 0~10V is used to control the full scale voltage of the instrument, where:

For 0~5V: Output voltage = full scale voltage \times (external voltage/5)


For 0~10V: Output voltage = full scale voltage \times (external voltage/10)

Connection When connecting the external voltage source to the isolated voltage option, use shielded or twisted paired wiring.

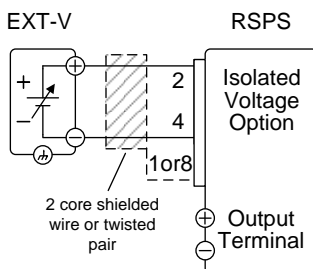




- Pin4(GND_ISO) → EXT-V (-)
- Pin2(+VPROG_ISO) → EXT-V (+)
- Pin 1 or 8 (Shield) → Wire shield

 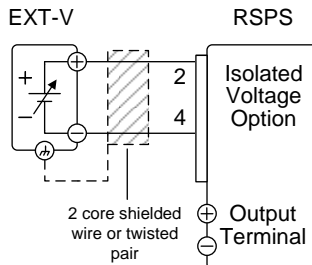Connection- alt. shielding If the wire shield needs to be grounded at the voltage source (EXT-V), then it can be connected as shown below.



- Pin4(GND_ISO) → EXT-V (-)
- Pin2(+VPROG_ISO) → EXT-V (+)
- EXT-V ground (GND) → Wire shield

- Panel operation
1. Connect the external voltage according to the connection diagrams above.
 2. Set the F-90 power on configuration setting to 4 (Control by Isolated Board). Page 104
 3. Set the F-97 power on configuration setting to 0 (0~5V control range) or to 1 (0~10V control range). Page 104
 - Be sure to cycle the power after the power on configuration has been set.
 4. Press the Function key and confirm the new configuration settings (F-90=4, F-97=0 or 1). Function 
 5. Press the Output key. The voltage can now be controlled with the isolated external voltage control. Output  



Note

The input impedance for isolated external voltage control is 1MΩ.

Use a stable voltage supply for the external voltage control.



Note

CV and CC Slew Rate Priority are disabled for V-I mode (F-03) when using external voltage control. See the normal function settings on page 93.



CAUTION

Ensure the voltage polarity is correct when connecting the external voltage.

Ensure no more than 10.5V (for the 0~10V setting) or 5.25V (for the 0~5V setting) are to be input into the isolated voltage input.

Isolated External Voltage Control of Current Output


Background

Voltage control of the current output uses the isolated voltage option (PSU-ISO-V). A voltage of 0~5V or 0~10V is used to control the full scale current of the instrument, where:

For 0~5V: Output current = full scale current × (external voltage/5)


For 0~10V: Output current = full scale current × (external voltage/10)

Connection When connecting the external voltage source to the isolated voltage option, use shielded or twisted paired wiring.

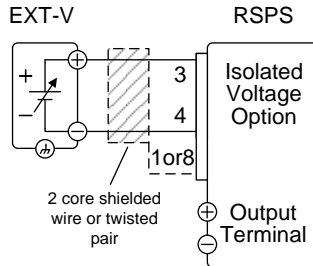



- Pin4(GND_ISO) → EXT-V (-)
- Pin3(+IPROG_ISO) → EXT-V (+)
- Pin 1 or 8 (Shield) → Wire shield

Connection- alt. shielding If the wire shield needs to be grounded at the voltage source (EXT-V), then it can be connected as shown below.

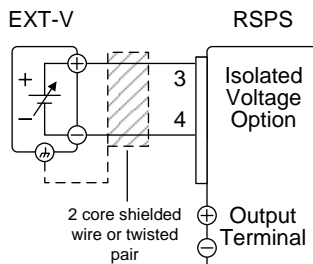

- Pin4(GND_ISO) → EXT-V (-)
- Pin3(+IPROG_ISO) → EXT-V (+)
- Wire shield → EXT-V ground (GND)

  - Steps**
1. Connect the external voltage according to the connection diagrams above.
 2. Set the F-91 power on configuration setting to 4 (Control by Isolated Board).

3. Set the F-97 power on configuration setting to 0 (0~5V control range) or 1 (0~10V control range). Page 104
- Be sure to cycle the power after the power on configuration has been set.
4. Press the Function key and confirm the new configuration settings (F-91=4, F-97=0 or 1). Function 
5. Press the Output key. The current can now be controlled with the isolated external voltage control. Output 



Note

The input impedance of isolated external voltage control is 1MΩ.

Use a stable voltage supply for the external voltage control.



Note

CV and CC Slew Rate Priority are disabled for V-I mode (F-03) when using external voltage control. See the normal function settings on page 93.



CAUTION

Ensure the voltage polarity is correct when connecting the external voltage.


Ensure no more than 10.5V (for the 0~10V setting) or 5.25V (for the 0~5V setting) are input into the external voltage input.

Isolated External Current Control of Voltage Output

Background Current control of the voltage output uses the isolated current option (PSU-ISO-I). A current of 4~20mA is used to control the full scale voltage of the instrument, where:


Output voltage = full scale voltage × ((external current-4mA)/16mA)

Connection When connecting the external current source to the isolated analog option, use shielded or twisted paired wiring.

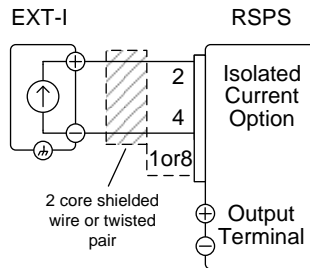

- Pin4(GND_ISO) → EXT-I (-)
- Pin2(+VPROG_ISO) → EXT-I (+)
- Pin 1 or 8 (Shield) → Wire shield

Connection- alt. shielding If the wire shield needs to be grounded at the current source (EXT-I), then it can be connected as shown below.

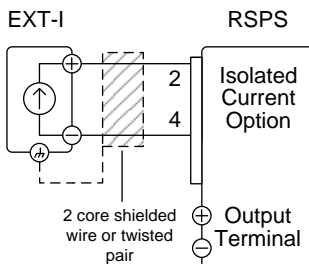

- Pin4(GND_ISO) → EXT-I (-)
- Pin2(+VPROG_ISO) → EXT-I (+)
- EXT-I ground (GND) → Wire shield

Panel operation 1. Connect the external current source according to the connection diagrams above.

2. Set the F-90 power on configuration setting to 4 (Control by Isolated Board). Page 104

3. Set the F-96 power on configuration setting to 1.

4. Set the F-97 power on configuration setting to 1.

• Be sure to cycle the power after the power on configuration has been set.

5. Press the Function key and confirm the new configuration settings (F-90=4, F-96=1, F-97=1).

Function



6. Press the Output key. The voltage can now be controlled with the isolated external current control.

Output





Note

Use a stable current supply for the external current control.



Note

CV and CC Slew Rate Priority are disabled for V-I mode (F-03) when using external current control. See the normal function settings on page 93.



CAUTION

Ensure the polarity is correct when connecting the external current.

Ensure no more than 21mA are input into the external isolated current input.

Isolated External Current Control of Current Output


Background

Current control of the current output uses the isolated current option (PSU-ISO-I). A current of 4~20mA is used to control the full scale current of the instrument, where:

Output current = full scale current × ((external current - 4mA)/16mA)


Connection

When connecting the external current source to the isolated current option, use shielded or twisted paired wiring.

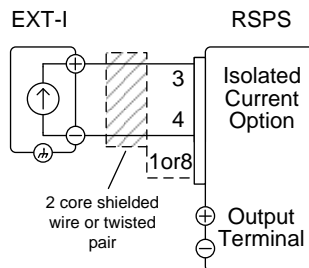

- Pin4(GND_ISO) → EXT-I (-)
- Pin3(+IPROG_ISO) → EXT-I (+)
- Pin 1 or 8 (Shield) → Wire shield

Connection- alt. If the wire shield needs to be grounded at the shielding current source (EXT-I), then it can be connected as shown below.

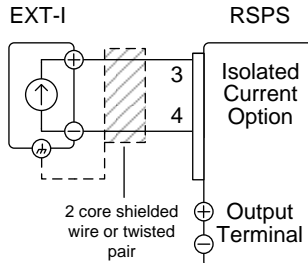

- Pin4(GND_ISO) → EXT-I (-)
- Pin3(+IPROG_ISO) → EXT-I (+)
- Wire shield → EXT-I ground (GND)

Steps

1. Connect the external current according to the connection diagrams above.
2. Set the F-91 power on configuration setting to 4 (Control by Isolated Board). Page 104
3. Set the F-96 power on configuration setting to 1.
4. Set the F-97 power on configuration setting to 1.
- Be sure to cycle the power after the power on configuration has been set.
5. Press the Function key and confirm the new configuration settings (F-91=4, F-96=1, F-97=1).
6. Press the Output key. The current can now be controlled with the External current.

Function



Output




Note

Use a stable current source for the external current control.


Note

CV and CC Slew Rate Priority are disabled for V-I mode (F-03) when using external voltage control. See the normal function settings on page 93.


CAUTION

Ensure the polarity is correct when connecting the external voltage.

Ensure no more than 21mA are input into the external current input.

Isolated External Voltage and Current Monitoring

Background

The isolated analog connector can also be used to monitor the current (IMON) or voltage (VMON).


For the isolated voltage option, an output of 0~5V or 0~10V represents the voltage or current output of 0~ rated current/voltage output.

- $IMON = (\text{current output/full scale}) \times (5 \text{ or } 10)$
- $VMON = (\text{voltage output/full scale}) \times (5 \text{ or } 10)$

For the isolated current option, an output of 4~20mA represents the voltage or current output of 0~ rated current/voltage output.


- $IMON = ((\text{current output/full scale}) \times 16\text{mA}) + 4\text{mA}$
- $VMON = ((\text{voltage output/full scale}) \times 16\text{mA}) + 4\text{mA}$

VMON Connection

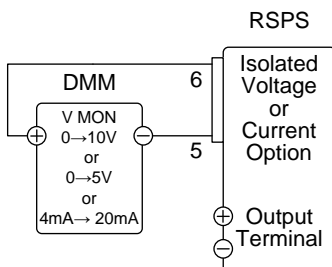

- Pin6 (+VMON_ISO) → Pos (+)
- Pin5 (GND_ISO) → Neg (-)


IMON Connection

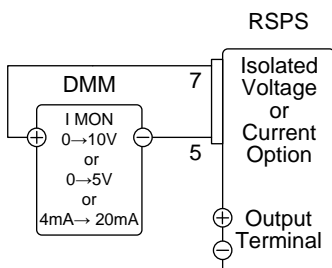

- Pin7(+IMON_ISO) → Pos (+)
- Pin5(GND_ISO) → Neg (-)

Steps

1. Connect the external voltage or external current source to the isolated voltage or current option according to the connection diagrams above.
 2. If using the isolated voltage option, Page 104 set the F-96 settings to 0 (0~5V) or 1 (0~10V) to choose the VMON or IMON output range.
 3. If using the isolated current option, Page 104 set the F-96 power on configuration setting to 1 to set the VMON and IMON output to 4mA ~ 20mA.
- Be sure to cycle the power after the power on configuration has been set.

4. Press the Function key and confirm the new configuration settings (F-96=0 or 1). 
 5. The current or voltage output can now be monitored using the isolated voltage or current option.
-



Note

The monitor outputs are strictly DC and should not be used to monitor analog components such as transient voltage response or ripple etc.

COMMUNICATION INTERFACE

This chapter describes basic configuration of IEEE488.2 based remote control.

| | |
|--|-----|
| Interface Configuration | 148 |
| USB Remote Interface | 148 |
| Configuration | 148 |
| Function Check | 149 |
| GPIB Remote Interface | 150 |
| Configuration | 150 |
| GPIB Function Check | 151 |
| UART Remote Interface | 155 |
| Configure UART | 155 |
| UART Function Check | 158 |
| Multiple Unit Connection | 159 |
| Legacy Multi-Drop mode | 159 |
| Multi-Drop mode | 162 |
| Multiple units Function Check | 165 |
| Configure Ethernet Connection | 168 |
| Web Server Configuration | 168 |
| Web Server Remote Control Function Check | 169 |
| Sockets Server Configuration | 171 |
| Socket Server Function Check | 172 |

Interface Configuration


USB Remote Interface

Configuration

| | | |
|-------------------|----------------------------|-----------------------------------|
| USB Configuration | PC side connector | Type A, host |
| | RSPS 150-10 side connector | Rear panel Type B, slave |
| | Speed | 1.1/2.0 (full speed/high speed) |
| | USB Class | CDC (communications device class) |

Steps

 1. Connect the USB cable to the rear panel USB B port.



2. Change the Rear panel-USB (F-22) setting to 2 (Auto Detect Speed) or 1 (USB Full Speed).

Page 103




Note

If you are not using the rear panel USB device port, set F-22 to 0 (Disable USB).

Page 103

 3. The RMT indicator will turn on when a remote connection has been established.



RMT indicator

Function Check

| | |
|---------------------|--|
| Functionality check | <p>Invoke a terminal application such as Realterm.</p> <p>To check the COM port No., see the Device Manager in the PC. For WinXP; Control panel → System → Hardware tab.</p> |
|---------------------|--|

Run this query command via the terminal application after the instrument has been configured for USB remote control (page 148).

*idn?

This should return the Manufacturer, Model number, Serial number, and Firmware version in the following format.

RS PRO, RSPS 150-10,TW123456,
T0.01.12345678

Manufacturer: RS PRO

Model number : RSPS 150-1040-38

Serial number : TW123456

Firmware version : T0.01.12345678

GPIB Remote Interface

Configuration


To use GPIB, the optional GPIB option (part number: PSU-GPIB) must be installed. This is a factory installed option and cannot be installed by the end-user. Only one GPIB address can be used at a time.

- Configure GPIB
1. Ensure the RSPS 150-10 is off before proceeding.
 2. Connect a GPIB cable from a GPIB controller to the GPIB port on the RSPS 150-10.
 3. Turn the RSPS 150-10 on.
 4. Press the Function key to enter the Page 103 Normal configuration settings.
 5. Set the following GPIB settings.

| | |
|-------------|-----------------------------|
| F-24 = 1 | Enable the GPIB port |
| F-23 = 0~30 | Set the GPIB address (0~30) |
 6. Check to see that the GPIB option is detected by the RSPS 150-10. The F-25 setting indicates the GPIB port status.

| | |
|----------|---|
| F-25 = 1 | Indicates that the GPIB port is available. |
| F-25 = 0 | Indicates that the GPIB port is not detected. |

 7. The RMT indicator will turn on when a remote connection has been established.



RMT indicator

- | | |
|-------------------------|--|
| <p>GPIB constraints</p> | <ul style="list-style-type: none"> • Maximum 15 devices altogether, 20m cable length, 2m between each device • Unique address assigned to each device • At least 2/3 of the devices turned On • No loop or parallel connection |
|-------------------------|--|

GPIB Function Check

- | | |
|-------------------|--|
| <p>Background</p> | <p>To test the GPIB functionality, National Instruments Measurement and Automation Explorer can be used. This program is available on the NI website, www.ni.com, via a search for the VISA Run-time Engine page, or “downloads” at the following URL, http://www.ni.com/visa/</p> |
|-------------------|--|

- | | |
|---------------------|---|
| <p>Requirements</p> | <p>Operating System: Windows XP, 7, 8</p> |
|---------------------|---|

- | | |
|----------------------------|---|
| <p>Functionality check</p> | <p>1. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press:</p> |
|----------------------------|---|


Start>All Programs>National Instruments>Measurement & Automation




2. From the Configuration panel access;

My System>Devices and Interfaces>GPIB


3. Press *Scan for Instruments*.

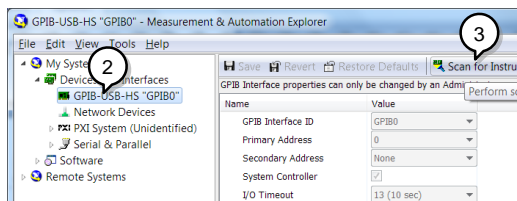


4. Select the device (GPIB address of RSPS 150-10) that now appears in the *System>Devices and Interfaces > GPIB-USB-HS "GPIBX"* node.
5. Click on the *VISA Properties* tab on the bottom.
6. Click *Open Visa Test Panel*.

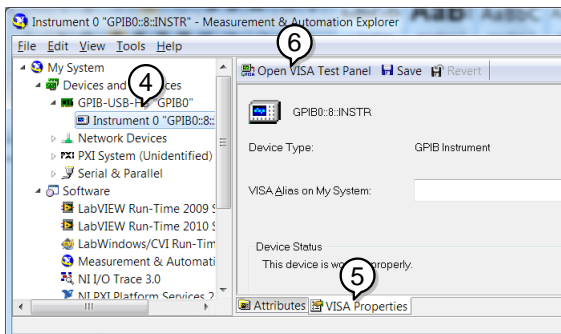

7. Click on *Configuration*.
8. Click on the *GPIB Settings* tab and confirm that the GPIB settings are correct.

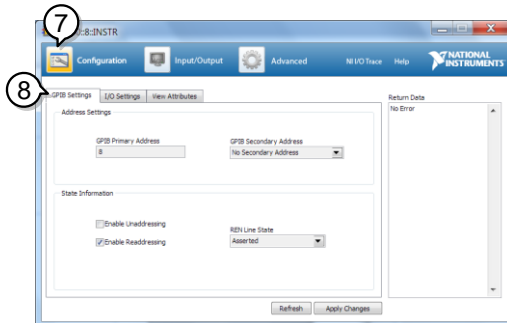

9. Click on the *I/O Settings* tab.
10. Make sure the *Enable Termination Character* check box is checked, and the terminal character is \n (Value: xA).
11. Click *Apply Changes*.

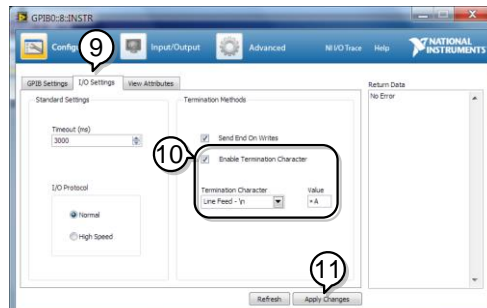


12. Click on *Input/Output*.
13. Click on the *Basic/IO* tab.
14. Enter *IDN? in the *Select or Enter Command*

drop down box.

15. Click *Query*.

16. The *IDN? query will return the Manufacturer, model name, serial number and firmware version in the dialog box.

RS PRO,RSPS 150-10, TW123456,
T0.02.20131205

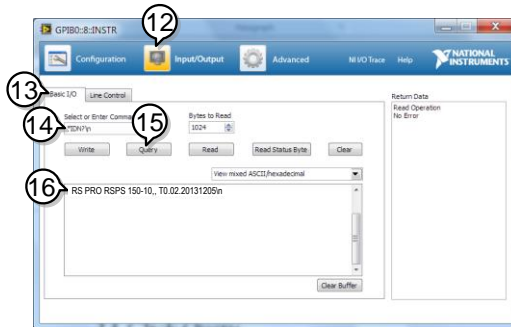

UART Remote Interface


Configure UART

Overview

The RSPS 150-10 uses the IN & OUT ports for UART communication coupled with RS232 (number PSU-232) or RS485 adapters (part number PSU-485).


The pin outs for the adapters are shown below.

| PSU-232 RS232 cable with DB9 connector | DB-9 Connector | | Remote IN Port | | Remarks |
|--|----------------|--------|----------------|--------|--------------|
| | Pin No. | Name | Pin No. | Name | |
| | Housing | Shield | Housing | Shield | |
| | 2 | RX | 7 | TX | Twisted pair |
| | 3 | TX | 8 | RX | |
| | 5 | SG | 1 | SG | |

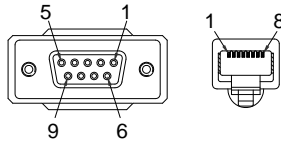


PSU-485 RS485 cable with DB9 connector

| DB-9 Connector | | Remote IN Port | | Remarks |
|----------------|--------|----------------|--------|--------------|
| Pin No. | Name | Pin No. | Name | |
| Housing | Shield | Housing | Shield | |
| 9 | TXD - | 6 | RXD - | Twisted pair |
| 8 | TXD + | 3 | RXD + | |
| 1 | SG | 1 | SG | |
| 5 | RXD - | 5 | TXD - | Twisted pair |
| 4 | RXD + | 4 | TXD + | |

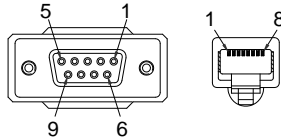

Steps

 1. Connect the RS232 serial cable (include in the PSU-232 connection kit) or RS485 serial cable (include in the PSU-485 connection kit) to the Remote IN port on the real panel.



Connect the other end of the cable to the PC.


2. Press the Function key to enter the Normal configuration settings. Page 103

Set the following UART settings:

| | |
|---------------|--|
| F-70 = 1 or 2 | Interface: 0= Disable UART, 1= RS232 or 2 = RS485 |
|---------------|--|

| | |
|---------------|---|
| F-71 = 0 ~ 7 | Set the baud rate: 0=1200, 1=2400, 2=4800, 3=9600, 4=19200, 5=38400, 6=57600, 7=115200 |
| F-72 = 0 or 1 | Data bits: 0=7 or 1=8 |
| F-73 = 0 ~3 | Parity: 0 = none, 1 = odd, 2 = even |
| F-74 = 0 or 1 | Stop bits: 0 = 1, 1 = 2 |
| F-75 = 0 or 1 | TCP: 0 = SCPI, 1 = TDK (emulation mode) |
| F-76 = 00~30 | UART address for multi-unit remote connection. |
| F-77 = 0~3 | Multi-Drop control 0 = Disable, 1 = Master, 2 = Slave, 3 = Display Information |
| F-78 = 00~30 | Multi-Drop status display Displayed parameter: AA-S AA: 00~30 (Address), S: 0~1 (Off-line/On-line status). |

 3. The RMT indicator will turn on when a remote connection has been established.



RMT indicator



Note

If TDK (emulation mode) is selected for F-75, the TDK GENESYS legacy commands should be used for remote commands. See the TDK Genesys user manual for details.

UART Function Check

Functionality check

Invoke a terminal application such as Realterm.

To check the COM port No, see the Device Manager in the PC. For WinXP; Control panel → System → Hardware tab.

Run this query command via the terminal application after the instrument has been configured for either RS232 or RS485 remote control (page 155).

*idn?

This should return the Manufacturer, Model number, Serial number, and Firmware version in the following format:

RSPRO RSPS 150-10, TW123456,
T0.01.12345678

Manufacturer: RSPRO

Model number : RSPS 150-10

Serial number : TW123456

Firmware version : T0.01.12345678

Multiple Unit Connection

The RSPS 150-10 power supplies can have up to 31 units daisy-chained together using the 8 pin connectors (IN OUT ports) on the rear panel. The first unit (master) in the chain is remotely connected to a PC using RS232 or RS485 (Legacy Multi-Drop mode), or USB, GPIB or LAN (Multi-Drop mode). Each subsequent unit (slave) is daisy-chained to the next using a RS485 local bus. The OUT port on the last terminal must be terminated by the end terminal connector.

There are two modes for controlling multiple units. The first mode only allows the user to enter TDK GENESYS legacy commands (Legacy Multi-Drop mode). All UART parameters have to be configured in this mode. The second mode allows the user to enter the SCPI commands developed for the instrument (Multi-Drop mode). In this mode, only the Multi-Drop parameters have to be specified. For both modes, each unit is assigned a unique address and can then be individually controlled from the host PC.


Legacy Multi-Drop mode

- Operation
1. Check the F-89 (System version and build date) settings first on all units (see page 99). The two parameters O and P (Option Module) must be the same on all units before any multiple unit connection can be established.

Example: F-89 O:00, P:01.

2. Connect the first unit's IN port to a PC via RS232 or RS485 serial cable.
 - Use the serial cables supplied in the PSU-232 or PSU-485 connection kit.
3. Connect the OUT port on the first unit to the IN port of the second unit using the slave serial link cable (black plug) supplied in the PSU-232 or PSU-485 connection kit.

4. Connect all the remaining units in the same fashion until all the units have been daisy-chained together.

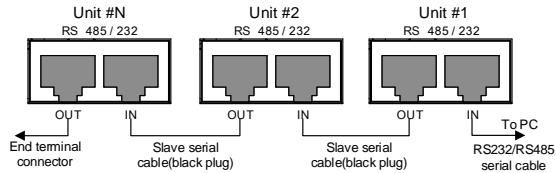

5. Terminate the OUT port of the last unit with the end terminal connector included in the PSU-232 or PSU-485 connection kit.
6. Press the Function key to enter the Page 103 Normal configuration settings for the master unit.

Set the following settings:

| | |
|---------------|--|
| F-70 = 1 or 2 | Configure the master unit as you normally would for RS232 or RS485 remote control, see page 155. |
| F-71 = 0~7 | Set the baud rate (set all units the same). See page 155. |
| F-72 = 1 | Set to 8 data bits. |
| F-73 = 0 | Parity to none. |
| F-74 = 0 | 1 Stop bit. |
| F-75 = 1 | Set the UART TCP to TDK (emulation mode). |
| F-76 = 00~30 | Set the address of the master unit. It must be a unique address identifier. |

7. Press the Function key to enter the Page 103 Normal configuration settings for the slave(s).

Set the following settings:

F-70 = 2 Set the slave unit to RS485.

- F-71 = 0~7 Set the baud rate (make all units, including the master, the same baud). See page 155.
- F-72 = 1 Set to 8 data bits.
- F-73 = 0 Parity to none.
- F-74 = 0 1 Stop bit.
- F-75 = 1 Set the UART TCP to TDK (emulation mode).
- F-76 = 00~30 Set the address of each slave to a unique address identifier

8. Multiple units can now be operated at the same time. Only TDK GENESYS legacy commands can be used in this mode. See the programming manual or see the function check below for usage details.

Slave serial link cable with RJ-45 shielded connectors from PSU-232 or PSU-485 connection kit

| RS-485 slave serial link pin assignment | | | |
|---|--------|-----------------------|--------|
| 8 Pin Connector (IN) | | 8 Pin Connector (OUT) | |
| Pin No. | Name | Pin No. | Name |
| Housing | Shield | Housing | Shield |
| 1 | SG | 1 | SG |
| 6 | TXD - | 6 | TXD - |
| 3 | TXD + | 3 | TXD + |
| 5 | RXD - | 5 | RXD - |
| 4 | RXD + | 4 | RXD + |




Multi-Drop mode

Operation

1. Check the F-89 (System version and build date) settings first on all units (see page 99). The two parameters O and P (Option Module) must be the same on all units before any multiple unit connection can be established.

Example: F-89 O:00, P:01.

2. All units must be powered down before starting the Multi-Drop mode configuration
3. Connect the first unit's LAN, USB or GPIB port to a PC.
4. Connect the OUT port on the first unit to the IN port of the second unit using the master serial link cable (gray plug) supplied in the PSU-232 or PSU-485 connection kit.
5. Connect all the remaining units between the OUT port and the IN port with the slave serial link cable (black plug) supplied in the PSU-232 or PSU-485 connection kit until all the desired units have been daisy-chained together.

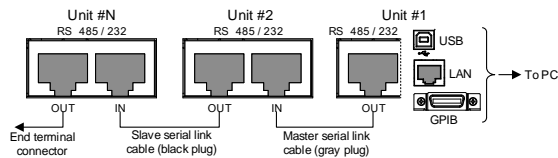

6. Terminate the OUT port of the last unit with the end terminal connector included in the PSU-232 or PSU-485 connection kit.
7. Power up all slave units.

8. Set the addresses of all slave units using the F-76 parameter.

F-76 = 00~30 Set the address of the unit. It must be a unique address identifier.

9. Set the Multi-Drop setting parameter (F-77) to Slave for all slave units.

F-77 = 2 Set the Multi-Drop setting to slave.

10. Power up the master unit.

11. Set the address of the master unit using the F-76 parameter.

F-76 = 00~30 Set the address of the unit. It must be a unique address identifier.

12. You can check the slaves' addresses by using the F-77 parameter on the master unit.

F-77 = 3 Display on each slave units the configured address. This can show if identical addresses have been assigned individually to each slave units.

13. Set the Multi-Drop setting parameter (F-77) to Master.


F-77 = 1 Set the Multi-Drop setting to master.

14. You can display the status of each slave unit by using the F-78 parameter.

F-78 = 0~30 Displayed parameter: AA-S
AA: 00~30 (Address),
S: 0~1 (Off-line/On-line status).

15. Multiple units can now be operated using SCPI commands. See the programming manual or see the function check below for usage details.

| Slave serial link cable with RJ-45 shielded connectors from PSU-232 or PSU-485 connection kit | RS-485 slave serial link pin assignment | | | |
|--|--|--------|-----------------------|--------|
| | 8 Pin Connector (IN) | | 8 Pin Connector (OUT) | |
| | Pin No. | Name | Pin No. | Name |
| | Housing | Shield | Housing | Shield |
| | 1 | SG | 1 | SG |
| | 6 | TXD - | 6 | TXD - |
| | 3 | TXD + | 3 | TXD + |
| | 5 | RXD - | 5 | RXD - |
| Master serial link cable with RJ-45 shielded connectors from PSU-232 or PSU-485 connection kit | RS-485 master serial link pin assignment | | | |
| | 8 Pin Connector (IN) | | 8 Pin Connector (OUT) | |
| | Pin No. | Name | Pin No. | Name |
| | Housing | Shield | Housing | Shield |
| | 1 | SG | 1 | SG |
| | 6 | TXD - | 5 | RXD - |
| | 3 | TXD + | 4 | RXD + |
| | 5 | RXD - | 6 | TXD - |
| | 4 | RXD + | 3 | TXD + |

 

Multiple units Function Check

| | |
|------------------------|---|
| Functionality check | <p>Invoke a terminal application such as Realterm.</p> <p>To check the COM port No, see the Device Manager in the PC. For WinXP; Control panel → System → Hardware tab.</p> <p>Below shows examples using the Legacy Multi-Drop mode and the Multi-Drop mode.</p> |
| Legacy Multi-Drop mode | <p>When using the TDK GENESYS legacy commands, each unit can be individually controlled using the unique address identifiers. For this function check, we will assume that the master unit is assigned to address 8, while a slave is assigned address 11.</p> <p>Run this query command via the terminal application after the instruments have been configured for multi-unit control with Legacy Multi-Drop mode. See page 159.</p> <p>ADR 8 IDN?</p> <p>The identity string for the Master unit will be returned:</p> <p>RSPRO,RSPS 150-10,,T0.01.12345678</p> <p>Type the following:</p> <p>ADR 11 IDN?</p> <p>The identity string for the slave with address 11 will be returned:</p> <p>RSPRO, RSPS 150-10,,T0.01.12345678</p> |



Note

TDK commands do not use LF (line feed) codes to terminate commands. See the TDK GENESYS user manual for further information.

Multi-Drop mode When using the Multi-Drop mode, the entire SCPI command list developed for the RSPS 150-10 can be used. Each unit can be individually controlled after a slave unit has been selected. For this function check, we will assume that the master unit is assigned to address 0, while a slave is assigned address 5.

Run this query command via the terminal application after the instruments have been configured for multi-unit control with Multi-Drop mode. See page 159.

INST:SEL 0

*IDN?

RS PRO,RSPS 150-10,,T0.01.12345678

Selects the unit with address 0 and returns its identity string.

INST:SEL 5

*IDN?

RS PRO, RSPS 150-10,,T0.01.12345678

Selects the unit with address 5 and returns its identity string.

INST:SEL 6

Selects the unit with address 6 (not configured in our example). An error is displayed on the master front panel.

INST:SEL 0
SYST:ERR?
Settings conflict

Query the system errors. "Settings conflict" is returned.

INST:STAT?

33,0

Returns the active units and master unit in the bus.

33=0b100001

The units at address 0 and address 5 are on-line.

0

Master device's address is 0.

Configure Ethernet Connection

The Ethernet interface can be configured for a number of different applications. Ethernet can be configured for basic remote control or monitoring using a web server or it can be configured as a socket server.


The RSPS 150-10 supports both DHCP connections so the instrument can be automatically connected to an existing network or alternatively, network settings can be manually configured.

| | | |
|-----------------------------------|---|-------------------------------|
| Ethernet configuration Parameters | For details on how to configure the Ethernet settings, please see the configuration chapter on page 97. | |
| | MAC Address (display only) | LAN Enable/Disable |
| | DHCP Enable/Disable | IP Address |
| | Subnet Mask | Gateway |
| | DNS Address | Sockets Server Enable/Disable |
| | Web Server Enable/Disable | Web Password Enable/Disable |
| | Web Enter Password | |

Web Server Configuration

Configuration This configuration example will configure the RSPS 150-10 as a web server and use DHCP to automatically assign an IP address to the RSPS 150-10.

 1. Connect an Ethernet cable from the network to the rear panel Ethernet port.



2. Press the Function key to enter the Page 103 Normal configuration settings.

Set the following LAN settings:

| | |
|----------------------|--|
| F-36 = 1 | Turn LAN on |
| F-37 = 1 | Enable DHCP |
| F-59 = 1 | Turn the web server on |
| F-60 = 0 or 1 | Set to 0 to disable web password, set to 1 to enable web password |
| F-61 = 0000 ~9999 | Set the web password |

3. The LAN indicator will turn on when a network cable is plugged in.



LAN indicator



Note

It may be necessary to cycle the power or refresh the web browser to connect to a network.

Web Server Remote Control Function Check

Functionality
check

Enter the IP address of the power supply in a web browser after the instrument has been configured as a web server (page 168).

The web server allows you to monitor the function settings of the RSPS 150-10.

You can check the IP address by checking F-39 to F-42.

| | |
|------------|------------------------|
| F-39 = AAA | IP Address part 1 of 4 |
| F-40 = BBB | IP Address part 2 of 4 |
| F-41 = CCC | IP Address part 3 of 4 |
| F-42 = DDD | IP Address part 4 of 4 |

`http:// AAA.BBB.CCC.DDD`

The web browser interface appears.

The web browser interface allows you to access the following:

 
- Network configuration settings
 - Analog control pinouts & usage
 - RSPS 150-10 dimensions
 - Operating area diagram
-

Sockets Server Configuration

Configuration This configuration example will configure the RSPS 150-10 socket server.

The following configuration settings will manually assign the RSPS 150-10 an IP address and enable the socket server. The socket server port number is fixed at 2268.

1. Connect an Ethernet cable from the network to the rear panel Ethernet port.



2. Press the Function key to enter the Page 103 Normal configuration settings.

Set the following LAN settings:

| | |
|------------|-------------------------|
| F-36 = 1 | Enable LAN |
| F-37 = 0 | Disable DHCP |
| F-39 = 172 | IP Address part 1 of 4 |
| F-40 = 16 | IP Address part 2 of 4 |
| F-41 = 5 | IP Address part 3 of 4 |
| F-42 = 133 | IP Address part 4 of 4 |
| F-43 = 255 | Subnet Mask part 1 of 4 |
| F-44 = 255 | Subnet Mask part 2 of 4 |
| F-45 = 128 | Subnet Mask part 3 of 4 |
| F-46 = 0 | Subnet Mask part 4 of 4 |
| F-47 = 172 | Gateway part 1 of 4 |
| F-48 = 16 | Gateway part 2 of 4 |
| F-49 = 21 | Gateway part 3 of 4 |
| F-50 = 101 | Gateway part 4 of 4 |
| F-57 = 1 | Enable Sockets |


Socket Server Function Check

Background To test the socket server functionality, National Instruments Measurement and Automation Explorer can be used. This program is available on the NI website, www.ni.com, via a search for the VISA Run-time Engine page, or “downloads” at the following URL, <http://www.ni.com/visa/>

Requirements Operating System: Windows XP, 7, 8

Functionality check 1. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press:


Start>All Programs>National Instruments>Measurement & Automation

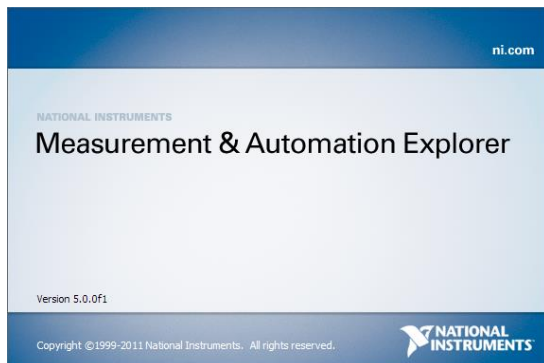


2. From the Configuration panel access;

My System>Devices and Interfaces>Network Devices


3. Press *Add New Network Device>Visa TCP/IP Resource...*

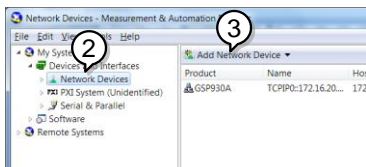

4. Select *Manual Entry of Raw Socket* from the popup window.

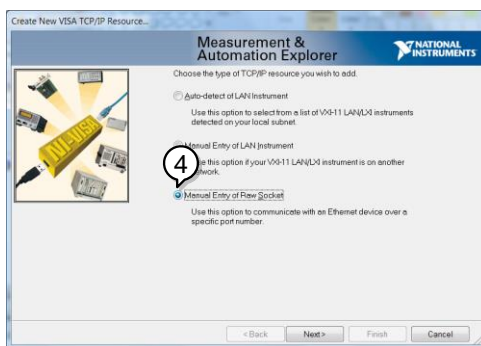


5. Enter the IP address and the port number of the RSPS 150-10. The port number is fixed at 2268.
6. Click the Validate button.
7. A popup will appear if a connection is successfully established.
8. Click Next.

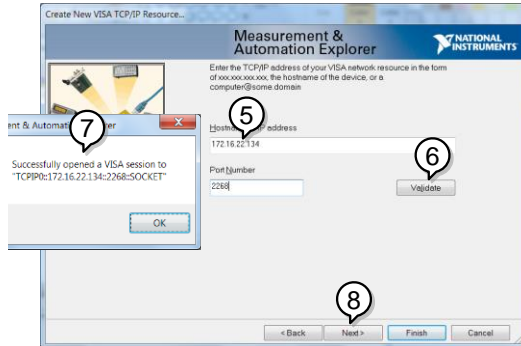


9. Next configure the Alias (name) of the RSPS 150-10 connection. In this example the Alias is: RSPS 150-10_DC1

10. Click finish.

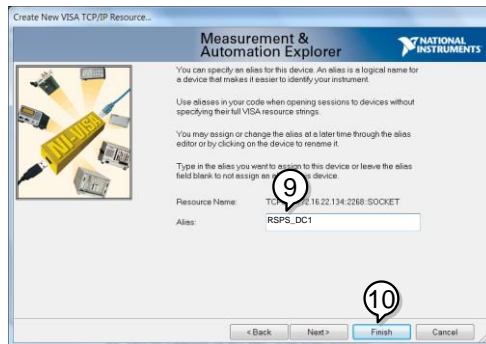

11. The IP address of the RSPS 150-10 will now appear under Network Devices in the configuration panel. Select this icon now.

12. Click *Open VISA Test Panel*.

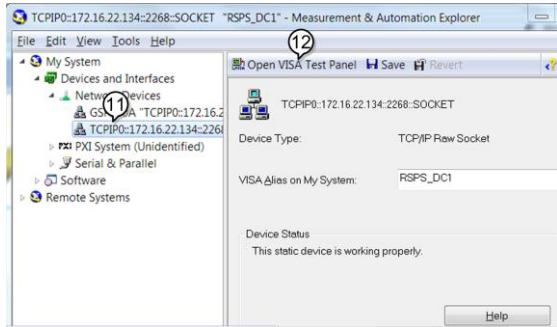


13. Click the *Configuration* icon,

14. Click on *I/O Settings*.

15. Make sure the *Enable Termination Character* check box is checked, and the terminal character is `\n` (Value: xA).

16. Click *Apply Changes*.

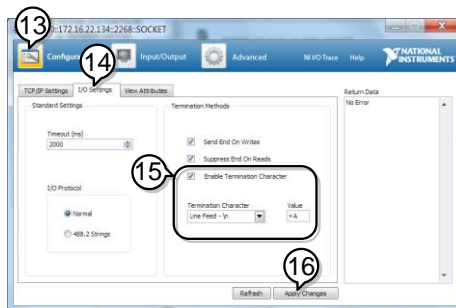

17. Click the *Input/Output* icon.


18. Enter `*IDN?` in the *Select or Enter Command* dialog box if it is not already.

19. Click the *Query* button.

20. The `*IDN?` query will return the Manufacturer,

model name, serial number and firmware version in the dialog box.

RS PRO,RSPS 150-10, TW123456,
T0.02.20131205

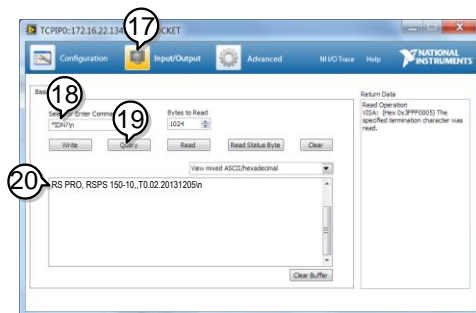

FAQ

- How often should the power supply be calibrated?
- The OVP voltage is triggered earlier than expected.
- Can I combine more than 1 cable together for the output wiring?
- The accuracy does not match the specification.

The OVP voltage is triggered earlier than expected.

When setting the OVP voltage, take into account the voltage drop from the load cables. As the OVP level is set from the output terminals and not the load terminals, the voltage at the load terminals may be slightly lower.

Can I combine more than 1 cable together for the output wiring?

Yes. Cables can be used together (in parallel) if the current capacity of a single cable is insufficient. However the withstand voltage should also be taken into account. Ensure the cables are twisted together and are the same length.

The accuracy does not match the specification.

Make sure the device is powered On for at least 30 minutes, within +20°C~+30°C. This is necessary to stabilize the unit to match the specification.

APPENDIX

| | |
|--|-----|
| RSPS 150-10 Factory Default Settings | 179 |
| Error Messages & Messages..... | 182 |
| LED ASCII Table Character Set..... | 183 |
| Specifications..... | 184 |
| Output..... | 184 |
| Constant Voltage Mode..... | 184 |
| Constant Current Mode..... | 184 |
| Protection Function | 184 |
| Analog Programming and Monitoring..... | 185 |
| Front Panel..... | 185 |
| Programming and Measurement (RS-232/485, USB, LAN, GPIB)..... | 186 |
| Input Characteristics | 186 |
| Interface Capabilities..... | 186 |
| Environment Conditions | 187 |
| General Specifications | 187 |
| Dimensions | 188 |
| Certificate Of Compliance | 189 |

RSPS 150-10 Factory Default Settings

The following default settings are the factory configuration settings for the power supply.

For details on how to return to the factory default settings, see page 42.

| Initial Settings | Default Setting | |
|---|-----------------|-----------------------------------|
| Output | Off | |
| LOCK | 0 (Disabled) | |
| Voltage | 0V | |
| Current | 0A | |
| OVP | 1.1 X Vrate | |
| OCP | 1.1 X Irate | |
| Normal Function Settings | Setting | Default Setting |
| Output ON delay time | F-01 | 0.00s |
| Output OFF delay time | F-02 | 0.00s |
| V-I mode slew rate select | F-03 | 0 = CV high speed priority (CVHS) |
| Internal resistance setting | F-08 | 0.000Ω |
| Bleeder circuit control | F-09 | 1 = ON |
| Buzzer ON/OFF control | F-10 | 1 = ON |
| OCP Delay Time | F-12 | 0.1 sec |
| Current Setting Limit | F-13 | 0 = OFF |
| Voltage Setting Limit | F-14 | 0 = OFF |
| Display Memory parameter when recalling | F-15 | 0 = OFF |
| Auto Calibration | F-16 | 0 = Disable |
| Parallel Control | F-17 | 0 = Low |
| Measurement Average Setting | F-18 | 0 = Safe Mode |
| Alarm Recovery and Output Status | F-19 | 0:Lock Panel, Allow Output OFF |
| Lock Mode | F-19 | 0:Lock Panel, Allow Output OFF |
| USB / GPIB setting | Setting | Default Setting |
| Setup Rear USB Speed | F-22 | 2 = Auto Detect Speed |
| GPIB address | F-23 | 8 |
| GPIB Enable/Disable | F-24 | 1 = Enable GPIB |



| | | |
|---|----------------|----------------------------|
| SCPI Emulation | F-26 | 0 = GW Instek |
| LAN setting | Setting | Default Setting |
| LAN Enable | F-36 | 1 = ON |
| DHCP | F-37 | 1 = ON |
| Socket Server Enable/Disable | F-57 | 1 = Enable |
| Web Server Enable/Disable | F-59 | 1 = Enable |
| Web Password Enable/Disable | F-60 | 1 = Enable |
| UART setting | Setting | Default Setting |
| UART Mode | F-70 | 1 = RS232 |
| UART Baud rate | F-71 | 7 = 115200 |
| UART Data Bits | F-72 | 1 = 8 bits |
| UART Parity | F-73 | 0 = None |
| UART Stop Bit | F-74 | 0 = 1 bit |
| UART TCP | F-75 | 0 = SCPI |
| UART Address | F-76 | 30 |
| UART Multi-Drop control | F-77 | 0 = Disable |
| Power On Configuration setting | Setting | Default Setting |
| CV Control | F-90 | 0 = Power On Configuration |
| CC Control | F-91 | 0 = Control by local |
| Output Status when Power ON | F-92 | 0 = Safe Mode (Always OFF) |
| Master/Slave Configuration | F-93 | 0 = Independent |
| External Output Logic | F-94 | 0 = High ON |
| Monitor Voltage Select | F-96 | 0 = 5V |
| Control Range | F-97 | 0 = 5V[5kΩ] |
| External Output Control Function | F-98 | 0 = OFF |

| Trigger Input and Output Configuration Settings | Setting | Default Setting |
|---|---------|--|
| Trigger Input Pulse Width | F100 | 0 = trigger controlled by trigger level. |
| Trigger Input Action | F102 | 0 = None |
| Output State When Receiving Trigger | F103 | 0 = OFF |
| Apply Voltage Setting on Trigger | F104 | 0 = 0V |
| Apply Current Setting on Trigger | F105 | 0 = 0A |
| Recall memory number | F106 | 1 = M1 |
| Trigger Output Pulse Width | F120 | 0ms |
| Trigger Output Level | F121 | 0 = LOW |
| Trigger Source | F122 | 0 = None |

Error Messages & Messages

The following error messages or messages may appear on the RSPS 150-10 screen during operation.

| Error Messages | Description |
|----------------|---|
| OHP | Master & slave board over temperature protection in RSPS 150-10 |
| OHP1 | Master board over temperature protection in RSPS 150-10 |
| OHP2 | Slave board over temperature protection in RSPS 150-10 |
| ALM SENS | Sense Alarm |
| HW OVP | Hardware over voltage protection |
| AC | AC fail |
| OVP | Over voltage protection |
| OCP | Over current protection |
| FAN FAIL | Fan failure |
| SHUT DOWN | Force shutdown |
| Err 001 | USB mass storage is not present |
| Err 002 | No (such)file in USB mass storage |
| Err 003 | Empty memory location |
| Err 004 | File access error |
| Err 007 | Slave occurs Off-line (Multi-Drop mode) |

| Normal Messages | Description |
|-----------------|--|
| MSG 001 | External control of output. Output off (F-94=0, High=on) |
| MSG 002 | External control of output. Output off (F-94=1, Low=on) |

| Communication Interface Messages | Description |
|----------------------------------|--|
| USB ON | Rear USB port connected to PC |
| USB OFF | Rear USB port disconnected from PC |
| MS ON | Mass storage plugged into front USB port |
| MS OFF | Mass storage removed from front USB port |

LED ASCII Table Character Set

Use the following table to read the LED display messages.

| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | B | C | D |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | b | C | d |
| E | F | G | H | I | J | K | L | M | N | O | P | Q | R |
| E | F | G | H | I | J | K | L | M | N | O | P | Q | R |
| S | T | U | V | W | X | Y | Z | (|) | + | - | , | |
| S | T | U | V | W | X | Y | Z | (|) | + | - | , | |

Specifications

The specifications apply when the RSPS 150-10 is powered on for at least 30 minutes.

Output

| | |
|------------------------------------|------|
| Rated Output Voltage ^{*1} | 150V |
| Rated Output Current ^{*2} | 10A |
| Rated Output Power | 1500 |

Constant Voltage Mode

| | | |
|---|---|--------|
| Line regulation ^{*3} | | 17mV |
| Load regulation ^{*4} | | 17mV |
| Ripple and noise ^{*5} | p-p ^{*6} | 100mV |
| | r.m.s. ^{*7} | 10mV |
| Temperature coefficient | 100ppm/°C of rated output voltage, after a 30 minute warm-up. | |
| Remote sense compensation voltage (single wire) | 5V | |
| Rise time ^{*8} | Rated load | 150ms |
| | No load | 150ms |
| Fall time ^{*9} | Rated load | 150ms |
| | No load | 2000ms |
| Transient response time ^{*10} | 2ms | |

Constant Current Mode

| | |
|---------------------------------|--|
| Line regulation ^{*3} | 3mA |
| Load regulation ^{*11} | 7mA |
| Ripple and noise ^{*12} | r.m.s. 35mA |
| Temperature coefficient | 100 ppm/°C of rated output current, after a 30 minute warm-up. |

Protection Function

| | | |
|-----------------------------------|------------------|----------------------|
| Over voltage protection (OVP) | Setting range | 5 - 165V |
| | Setting accuracy | 1500mV |
| Over current protection (OCP) | Setting range | 1 - 11A |
| | Setting accuracy | 200mA |
| Under voltage limit (UVL) | Setting range | 0 - 157.5 |
| Over temperature protection (OHP) | Operation | Turn the output off. |

| | | |
|---|---------------|------------------------------------|
| Incorrect sensing connection protection (SENSE) | Operation | Turn the output off. |
| Low AC input protection (AC-FAIL) | Operation | Turn the output off. |
| Shutdown (SD) | Operation | Turn the output off. |
| | Operation | Over power limit. |
| Power limit (POWER LIMIT) | Value (fixed) | Approx. 105% of rated output power |

Analog Programming and Monitoring

| | |
|--|---|
| External voltage control output voltage | Accuracy and linearity: $\pm 0.5\%$ of rated output voltage. |
| External voltage control output current | Accuracy and linearity: $\pm 1\%$ of rated output current. |
| External resistor control output voltage | Accuracy and linearity: $\pm 1\%$ of rated output voltage. |
| External resistor control output current | Accuracy and linearity: $\pm 1.5\%$ of rated output current. |
| Output voltage monitor | Accuracy: $\pm 1\%$ |
| Output current monitor | Accuracy: $\pm 1\%$ |
| Shutdown control | Turns the output off with a LOW (0V to 0.5V) or short-circuit. |
| Output on/off control | <p>Possible logic selections:</p> <p>Turn the output on using a LOW (0V to 0.5V) or short-circuit, turn the output off using a HIGH (4.5V to 5V) or open-circuit.</p> <p>Turn the output on using a HIGH (4.5V to 5V) or open-circuit, turn the output off using a LOW (0V to 0.5V) or short-circuit.</p> |
| Alarm clear control | Clear alarms with a LOW (0V to 0.5V) or short-circuit. |
| CV/CC/ALM/PWR ON/OUT ON indicator | Photo coupler open collector output; Maximum voltage 30V, maximum sink current 8mA. |
| Trigger out | Maximum low level output = 0.8V; minimum high level output = 2V; Maximum source current = 8mA. |
| Trigger in | Maximum low level input voltage = 0.8V; minimum high level input voltage = 2.0V, Maximum sink current = 8mA. |

Front Panel

| | |
|-------------------|--|
| Display, 4 digits | |
| Voltage accuracy | 0.1% + 300mV |
| Current accuracy | 0.2% + 30mA |
| Indications | <p>GREEN LED's: CV, CC, V, A, VSR, ISR, DLY, RMT, LAN, M1, M2, M3, RUN, Output ON</p> <p>RED LED's: ALM, ERR</p> |



| | |
|----------|---|
| Buttons | Lock/Local(Unlock), PROT(ALM_CLR), Function(M1), Test(M2), Set(M3), Shift, Output |
| Knobs | Voltage, Current |
| USB port | Type A USB connector |

Programming and Measurement (RS-232/485, USB, LAN, GPIB)

| | |
|---------------------------------------|--------------|
| Output voltage programming accuracy | 0.05% + 75mV |
| Output current programming accuracy | 0.2% + 10mA |
| Output voltage programming resolution | 5.2mV |
| Output current programming resolution | 0.34mA |
| Output voltage measurement accuracy | 0.1% + 150mV |
| Output current measurement accuracy | 0.2% + 20mA |
| Output voltage measurement resolution | 5.2mV |
| Output current measurement resolution | 0.34mA |

Input Characteristics

| | |
|---------------------------|--|
| Nominal input rating | 100Vac to 240Vac, 50Hz to 60Hz, single phase |
| Input voltage range | 85Vac ~ 265Vac |
| Input frequency range | 47Hz ~ 63Hz |
| Maximum input current | 100Vac 21 A 200Vac 11 A |
| Inrush current | Less than 50A. |
| Maximum input power | 2000 VA |
| Power factor | 100Vac 0.99 200Vac 0.98 |
| Efficiency ^{*13} | 100Vac 84% 200Vac 87% |
| Hold-up time | 20ms or greater |

Interface Capabilities

| | |
|-----------------------|--|
| USB | Type A: Host, Type B: Slave, Speed: 1.1/2.0, USB Class: CDC(Communications Device Class) |
| LAN | MAC Address, DNS IP Address, User Password, Gateway IP Address, Instrument IP Address, Subnet Mask |
| RS-232/RS-485 | Complies with EIA232D / EIA485 Specifications |
| GPIB (Factory Option) | SCPI - 1993, IEEE 488.2 compliant interface |

Environment Conditions

| | |
|-----------------------|---------------------------------|
| Operating temperature | 0°C to 50°C ¹⁴ |
| Storage temperature | -25°C to 70°C |
| Operating humidity | 20% to 85% RH; No condensation |
| Storage humidity | 90% RH or less; No condensation |
| Altitude | Maximum 2000m |

General Specifications

| | | |
|-----------------------|----------------|--|
| Weight | main unit only | Less than 8.7kg |
| Dimensions | (W×H×D) | 423 x 43.6 x 447.2 mm |
| Cooling | | Forced air cooling by internal fan. |
| EMC | | Complies with the European EMC directive for Class A test and measurement products. |
| Safety | | Complies with the European Low Voltage Directive and carries the CE-marking. |
| Withstand voltage | | AC to Chassis: 1500Vac/1min AC to Output terminal: 3000Vac/1min Output terminal to Chassis: Vout ≤ 150V: 1000Vdc/1min 150V < Vout ≤ 600V: 1500Vdc/1min |
| Insulation resistance | | Chassis and output terminal; chassis and AC input; AC input and output terminal: 100MΩ or more (DC 1000V) |

Notes:

¹ Minimum voltage is guaranteed to maximum 0.2% of the rated output voltage.

² Minimum current is guaranteed to maximum 0.4% of the rated output current.

³ At 85 ~ 132Vac or 170 ~ 265Vac, constant load.

⁴ From No-load to Full-load, constant input voltage. Measured at the sensing point in Remote Sense.

⁵ Measure with JEITA RC-9131B (1:1) probe

⁶ Measurement frequency bandwidth is 10Hz to 20MHz.

⁷ Measurement frequency bandwidth is 5Hz to 1MHz.

⁸ From 10% to 90% of rated output voltage, with rated resistive load.

⁹ From 90% to 10% of rated output voltage, with rated resistive load.

¹⁰ Time for output voltage to recover within 0.5% of its rated output for a load change from 0 to 90% of its rated output current. Voltage set point from 10% to 100% of rated output.


¹¹ For load voltage change, equal to the unit voltage rating, constant input voltage.

¹² For 6V~20V model the ripple is measured at 2V ~ rated output voltage and full output current. For other models, the ripple is measured at 10 ~ 100% output voltage and full output current.

¹³ At rated output power.

¹⁴ If install the front panel filter kit, the temperature is guaranteed to 40°C.

Dimensions

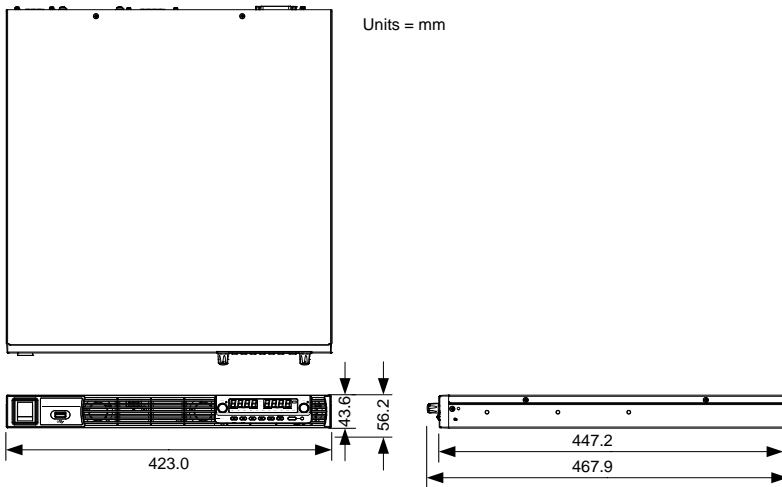

Certificate Of Compliance

We

declare that the CE marking mentioned product

satisfies all the technical relations application to the product within the scope of council:

Directive: EMC; LVD; WEEE; RoHS

The product is in conformity with the following standards or other normative documents:

| | |
|--|--|
| ⊙ EMC | |
| EN 61326-1 | Electrical equipment for measurement, control and laboratory use — EMC requirements |
| Conducted & Radiated Emission EN 55011 / EN 55032 | Electrical Fast Transients EN 61000-4-4 |
| Current Harmonics EN 61000-3-2 / EN 61000-3-12 | Surge Immunity EN 61000-4-5 |
| Voltage Fluctuations EN 61000-3-3 / EN 61000-3-11 | Conducted Susceptibility EN 61000-4-6 |
| Electrostatic Discharge EN 61000-4-2 | Power Frequency Magnetic Field EN 61000-4-8 |
| Radiated Immunity EN 61000-4-3 | Voltage Dip/ Interruption EN 61000-4-11 / EN 61000-4-34 |
| ⊙ Safety | |
| EN 61010-1 : | Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 1: General requirements |

INDEX

| | | | |
|------------------------------------|----------|----------------------------------|-----|
| Accessories | 11 | UART settings | 98 |
| Alarm | | USB/GPIB settings | 96 |
| description | 25 | Conventions..... | 40 |
| Analog connector | | CV mode | |
| pin assignment..... | 108 | operation | 49 |
| Analog control | | Declaration of conformity | 189 |
| output control | 120 | Default settings | |
| overview..... | 106 | reset..... | 42 |
| remote monitoring | 125 | Display diagram | 17 |
| resistance control – current | | Display format | 183 |
| output | 118 | Disposal instructions | 7 |
| resistance control – voltage | | EN61010 | |
| output | 115 | measurement category | 6 |
| shutdown control | 123 | pollution degree..... | 7 |
| status monitoring | 127, 130 | Environment | |
| voltage control – current output | 113 | safety instruction | 7 |
| voltage control – voltage output | 111 | Error messages..... | 182 |
| ASCII table character set | 183 | Ethernet | |
| Bleeder control | | interface | 168 |
| description | 24 | sockets | 171 |
| Build date | | web server | 168 |
| view | 43 | Factory default settings..... | 179 |
| Caution symbol | 5 | FAQ..... | 177 |
| CC and CV mode | | Front panel diagram | 14 |
| description | 22 | Ground | |
| CC mode | | symbol | 5 |
| operation..... | 52 | Grounding | 29 |
| Cleaning the instrument..... | 7 | How to use the instrument..... | 40 |
| Configuration | | Internal resistance | |
| LAN settings..... | 97 | description..... | 25 |
| Normal function settings | 93 | Isolated analog control option | |
| normal function settings operation | 103 | current control – current output | 142 |
| overview..... | 88 | current control – voltage output | 140 |
| power on configuration operation | 104 | current monitoring..... | 144 |
| power on configuration settings. | 100 | overview | 132 |
| script test settings..... | 80 | pinout..... | 134 |
| special function settings. | 103 | specifications | 133 |
| System settings | 99 | voltage control – current output | 137 |
| table | 88 | voltage control – voltage output | 135 |
| test function settings | 81 | | |

| | | | |
|----------------------------------|----------|---------------------------------|-----|
| voltage monitoring | 144 | multi-unit function check..... | 165 |
| Line voltage connection | 33 | sockets configuration | 171 |
| List of features..... | 10 | sockets function check | 172 |
| Messages..... | 182 | UART configuration..... | 155 |
| OCP level..... | 46 | UART function check..... | 158 |
| Operating area description | 21 | USB configuration | 148 |
| Operation considerations..... | 27 | USB function check..... | 149 |
| floating output..... | 29 | Remote sense | |
| inrush current | 27 | operation | 58 |
| pulsed loads | 27 | Remote sense connector | 57 |
| reverse current..... | 28 | Remote sense cover..... | 57 |
| Optional accessories | 11 | Save setup | 55 |
| Output terminal..... | 37 | Series mode | |
| cover..... | 39 | Operation..... | 76 |
| load cables | 38 | overview | 73 |
| OVP level | 46 | Series operation | 62 |
| Package contents | 11 | Service operation | |
| Panel lock | 54 | about disassembly | 6 |
| Parallel calibration | 71 | Slew rate | |
| Parallel mode | | description..... | 24 |
| connection | 65 | Socket server function check .. | 172 |
| operation..... | 69 | Specifications..... | 184 |
| overview..... | 63 | System version | |
| Parallel operation..... | 62 | view..... | 43 |
| Power on/off | | Test script | |
| safety instruction..... | 6 | Export | 84 |
| Power sequence | 35 | Load | 82 |
| Rack mount | | overview | 80 |
| description | 40 | remove/delete test..... | 85 |
| Rear panel diagram..... | 19 | Run..... | 83 |
| Remote control..... | 147 | UK power cord..... | 8 |
| Ethernet configuration..... | 168 | UVL level..... | 46 |
| Ethernet function check | 169 | Voltage sense | |
| GPIB configuration | 150 | operation | 58 |
| GPIB function check..... | 151 | Warning symbol..... | 5 |
| interface configuration..... | 148 | Web server function check | 169 |
| local bus configuration | 159, 162 | Wire gauge chart..... | 36 |
| multi-unit configuration..... | 159, 162 | | |